



FORM MS-9691-08/24/2007
REPLACES FORM MS-9691-02/24/2007
FILE IN SECT. 2 OF SERVICE MANUAL

303400

Illustrated Parts List

Model Series

303400

TYPE NUMBERS
0021 through 1454.

TABLE OF CONTENTS


Air Cleaner	7
Alternator	16
Blower Housing	13
Camshaft	2
Carburetor	6
Carburetor Overhaul Kit	6
Controls	11
Crankcase Cover/Sump	4
Crankshaft	2
Cylinder	2
Cylinder Head	3
Electric Starter	17 & 18
Electric Starter Kit	14
Engine Gasket Set	7
Exhaust System	8 & 9
Flywheel	14
Fuel Supply	10
Governor Spring	11
Ignition	16
Intake Manifolds	4
Lubrication	5
Piston/Rings/Connecting Rod	2
Rewind Starter	15
Shrouds	12
Valve Gasket Set	6






PRINTED IN U.S.A.

BRIGGS & STRATTON






COPYRIGHT by BRIGGS & STRATTON CORPORATION
All rights reserved. No part of this material may be reproduced or transmitted, in any form or by any means, electronic or mechanical, including photocopying, recording or by any information storage and retrieval system, without permission in writing from Briggs & Stratton Corporation.

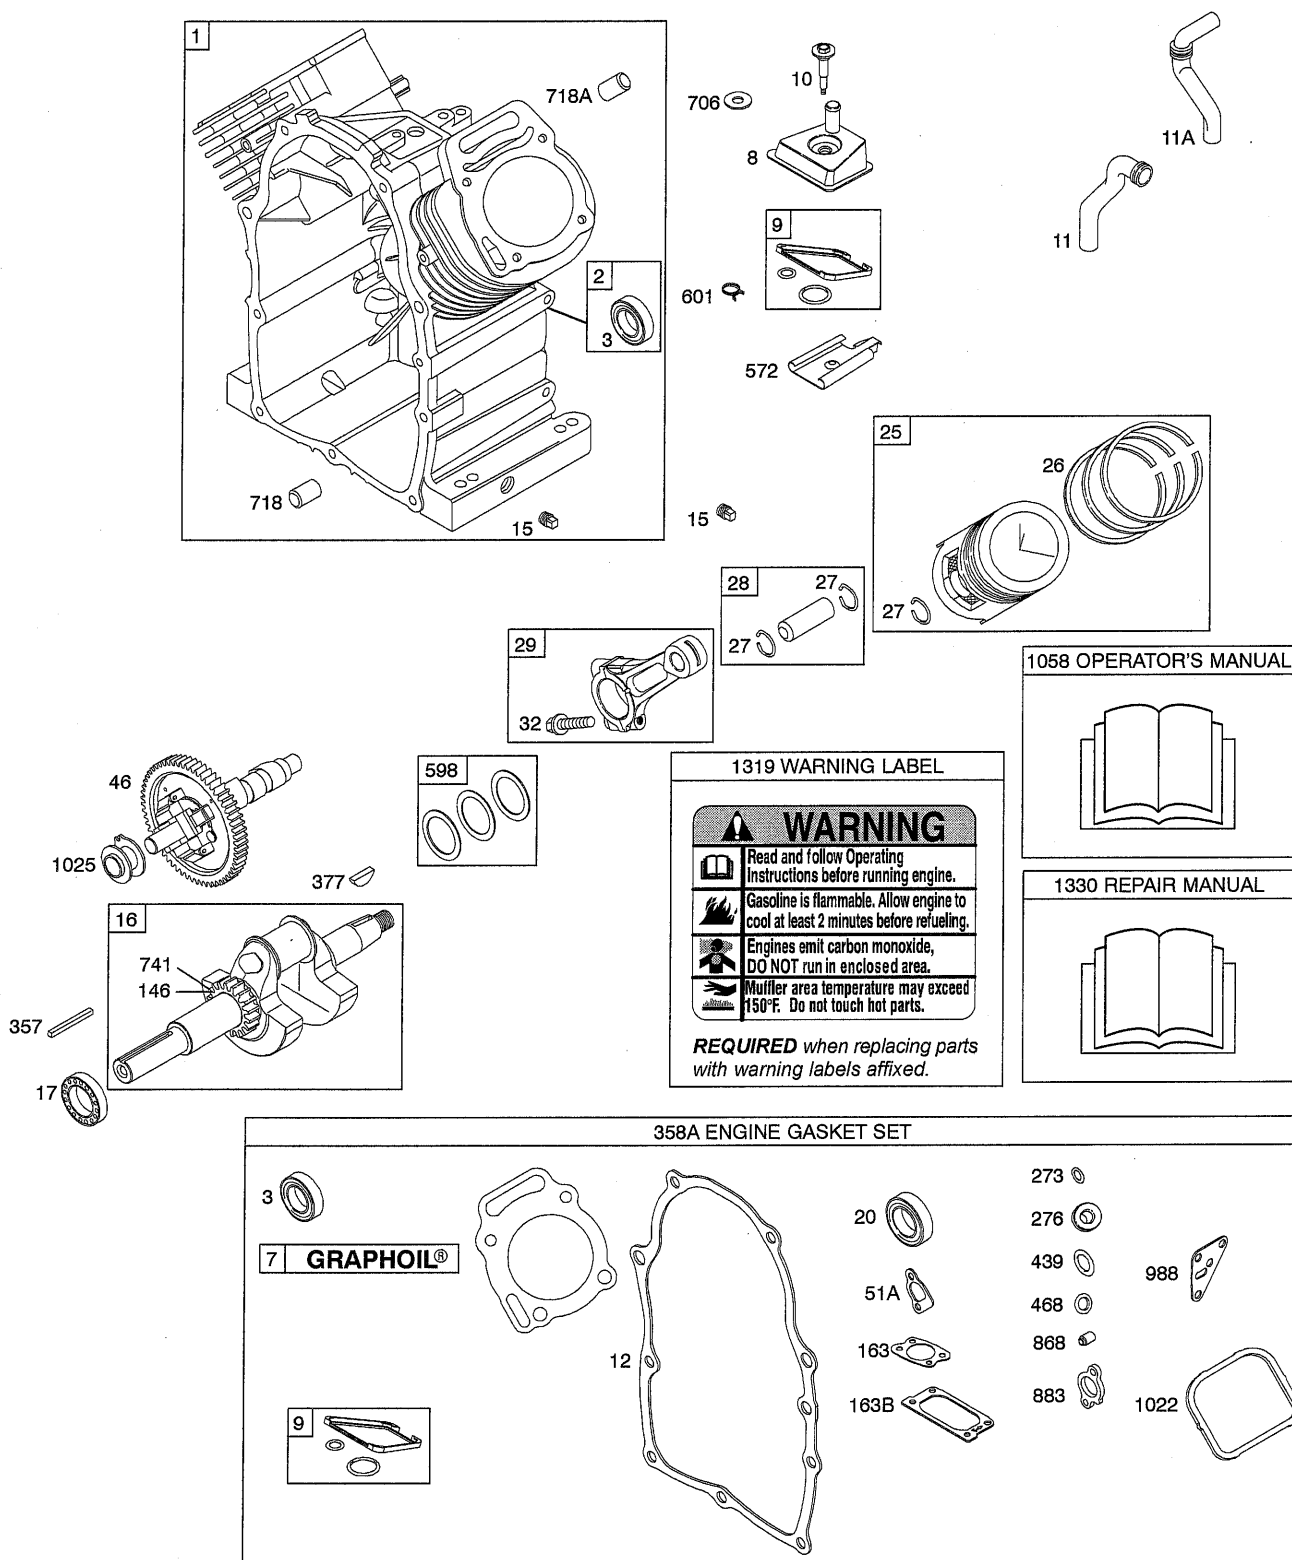


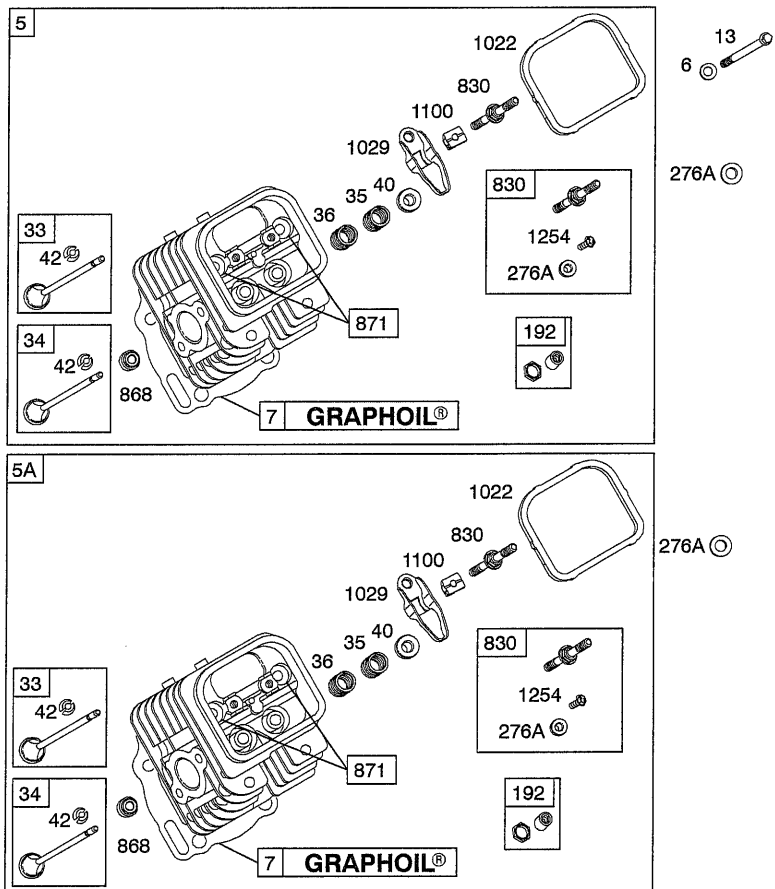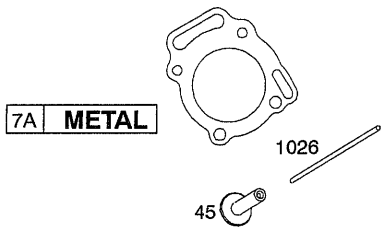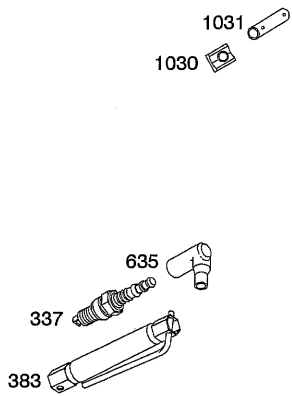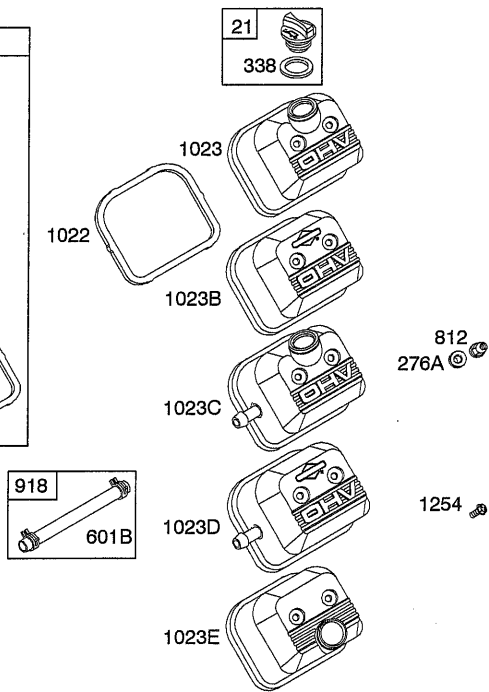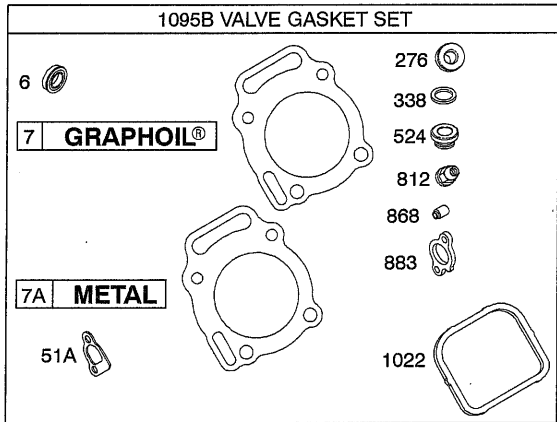


303400

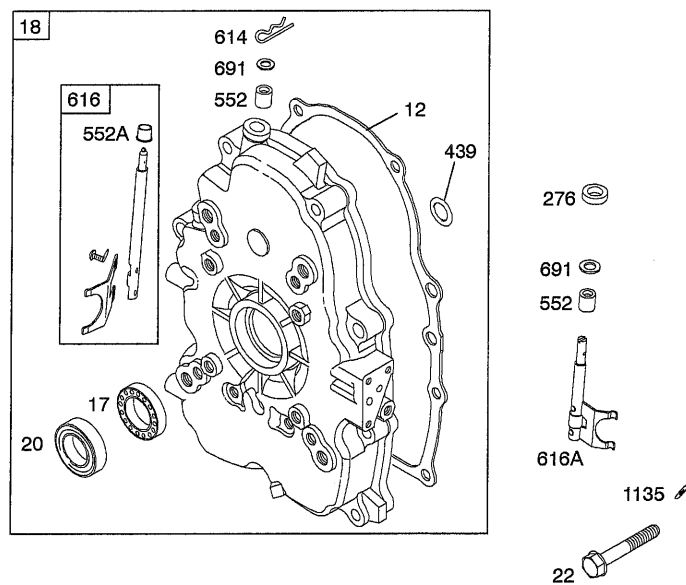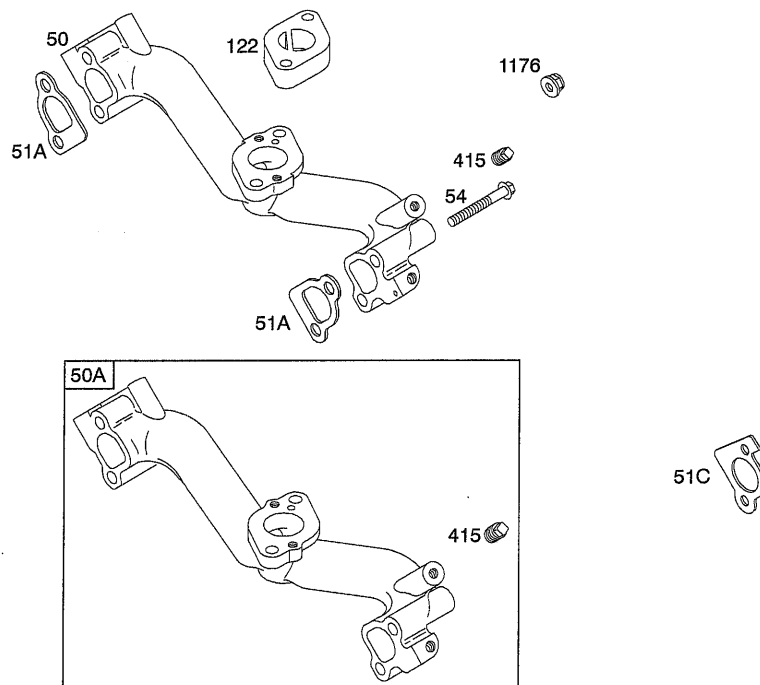

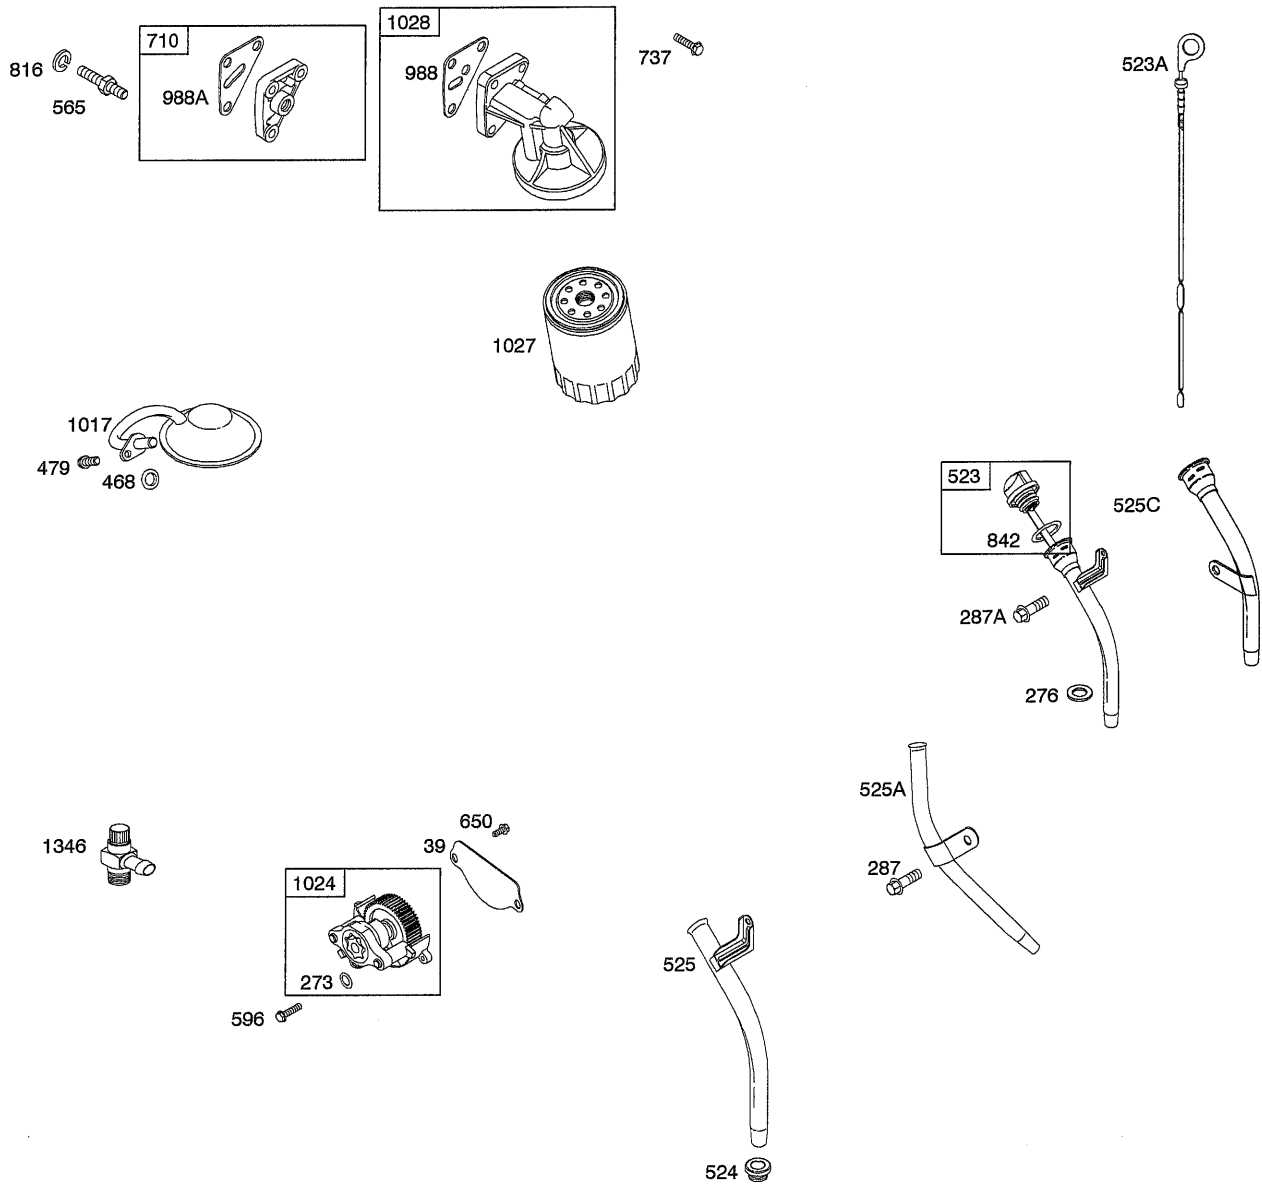

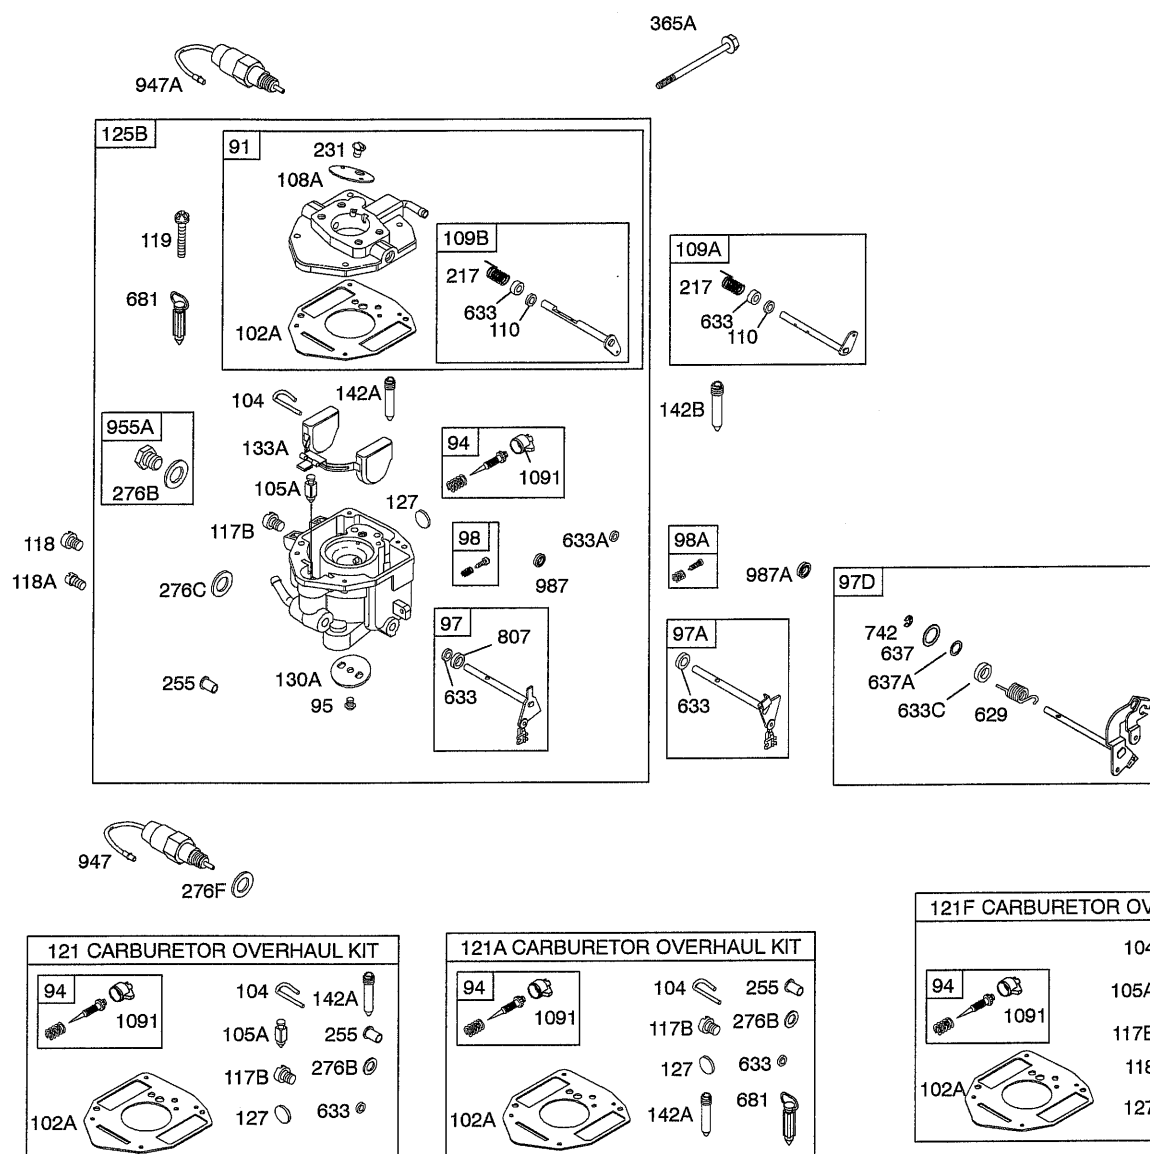



No information for high altitude jet on types : 1314 & 1319.

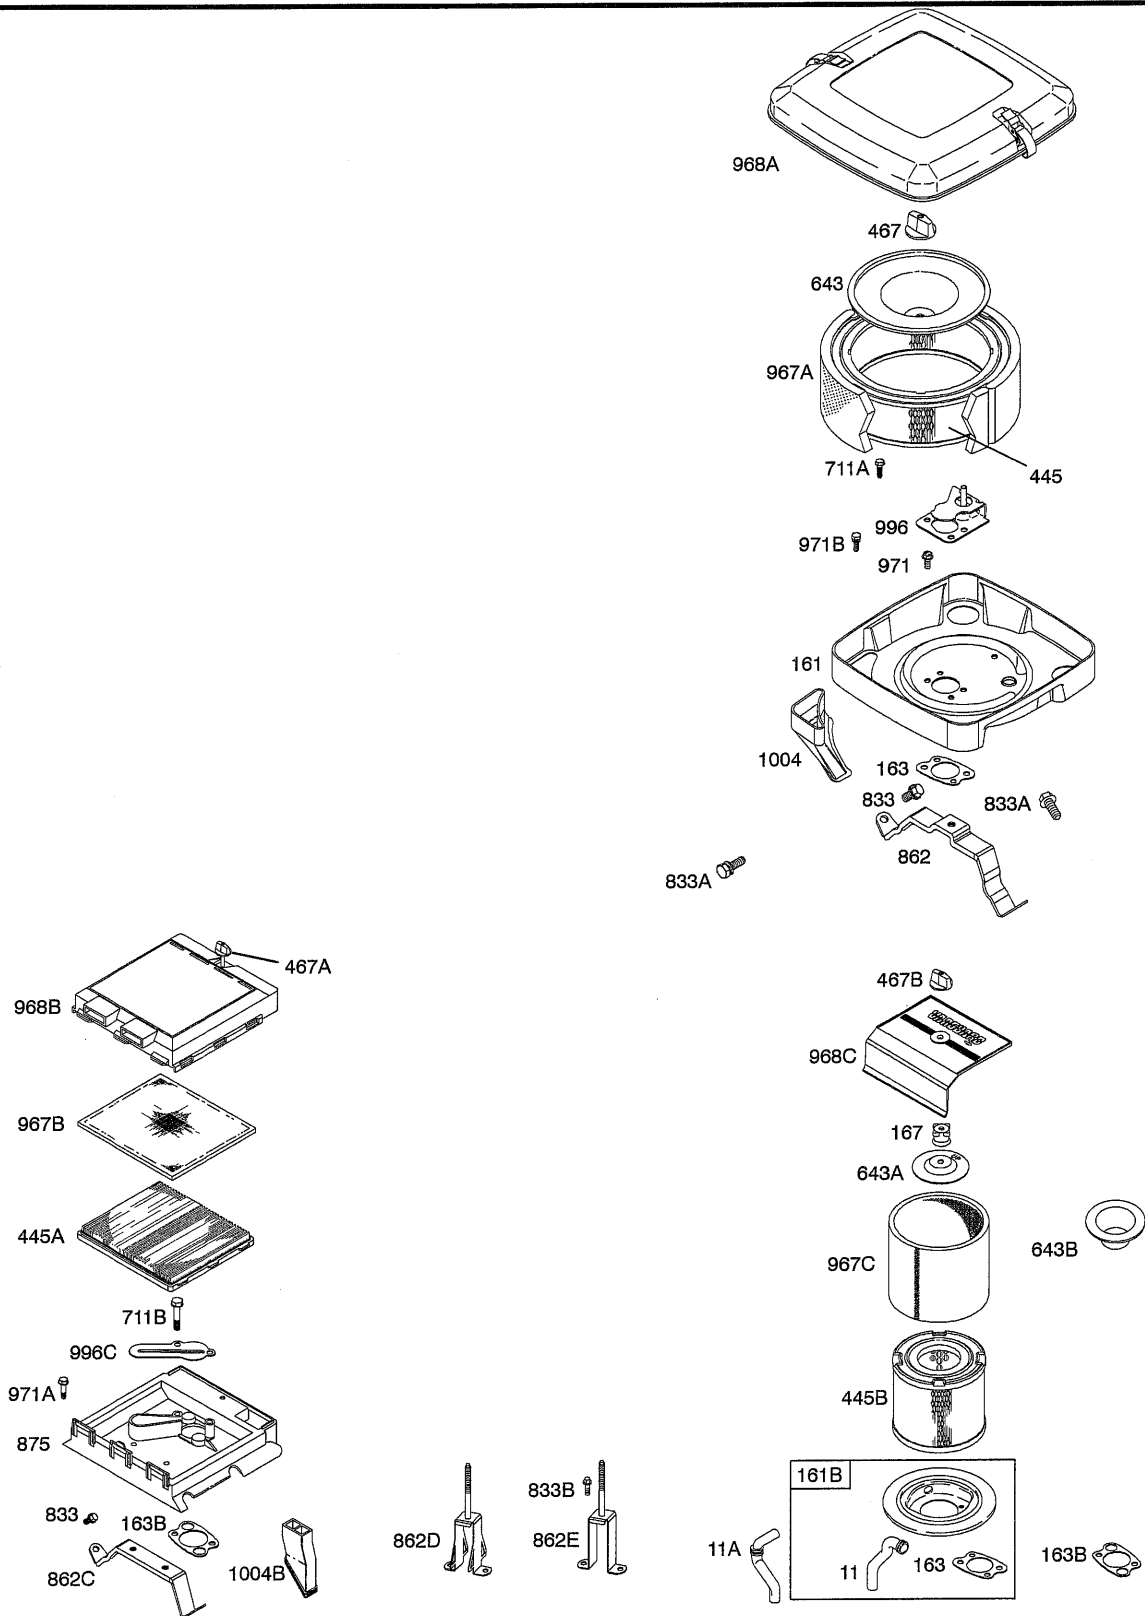


303400

 728B 

725B 

 725D 


836 

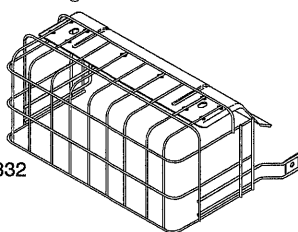832 


837 


676C 
677 



676D 
677A 

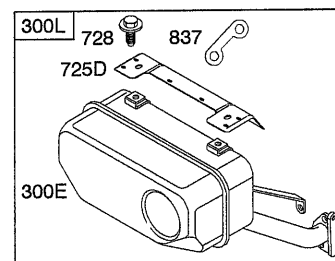


613 

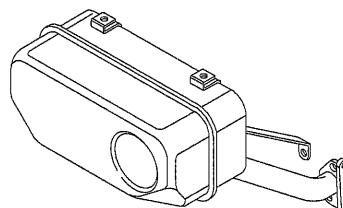300E 

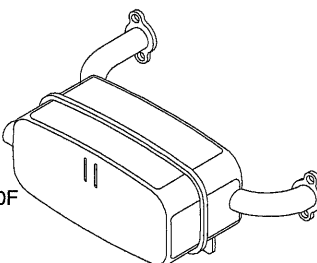
836A 
300F 

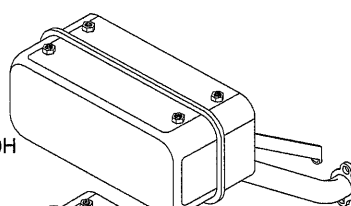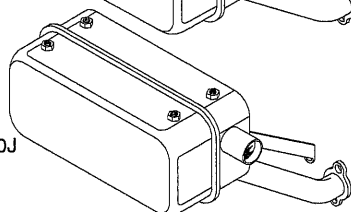300H 
300J 







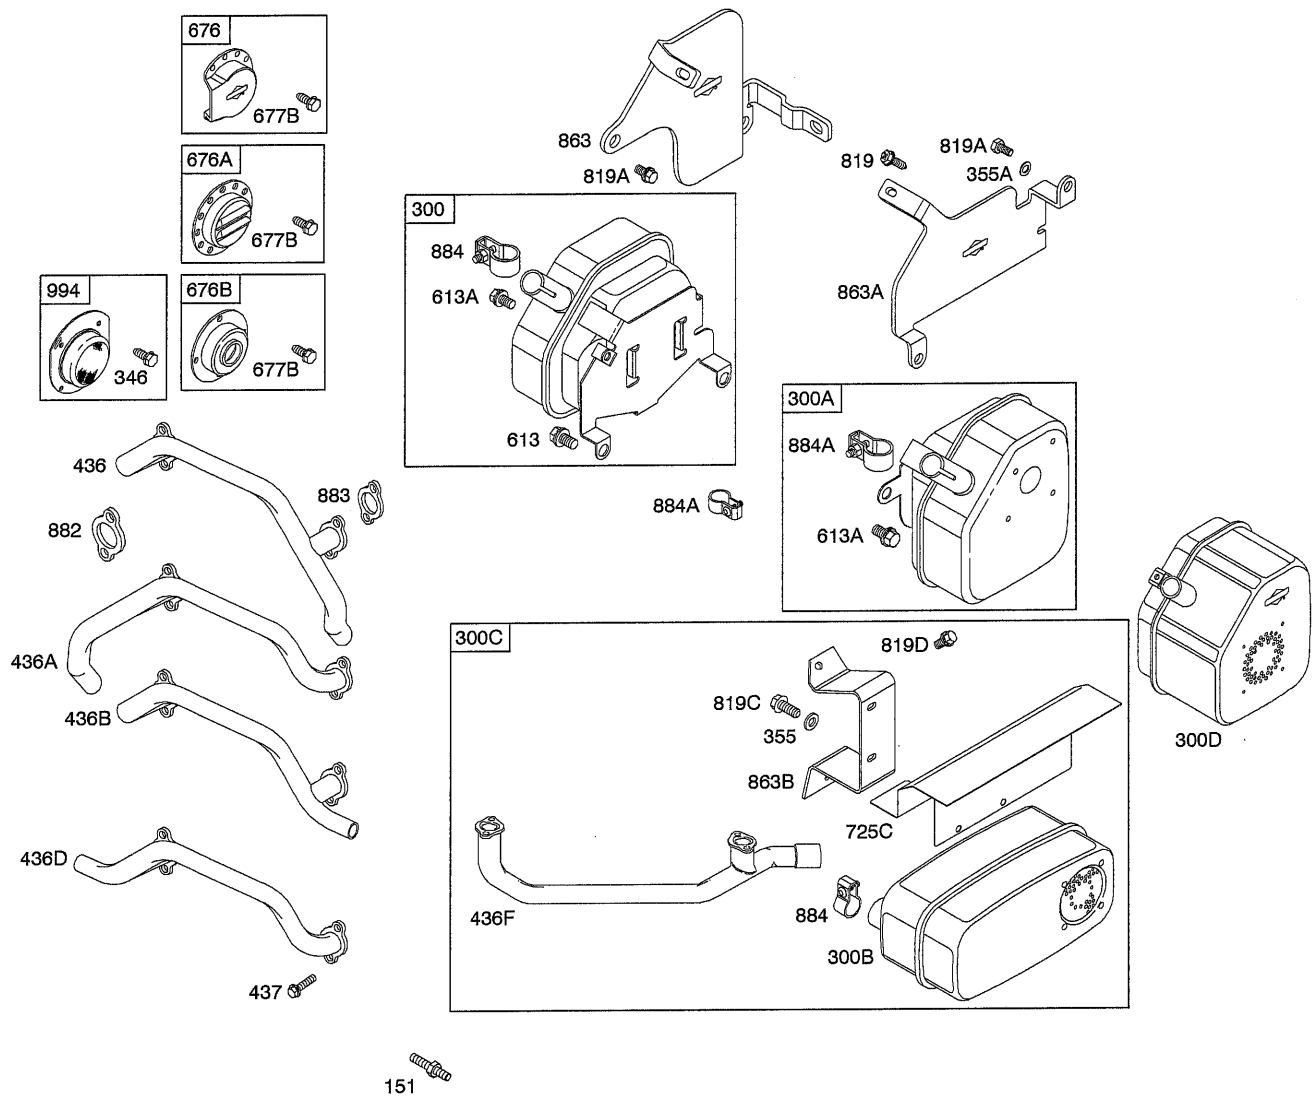


303400




7 QUART

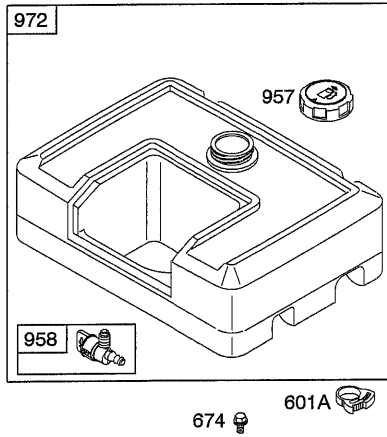

968E

    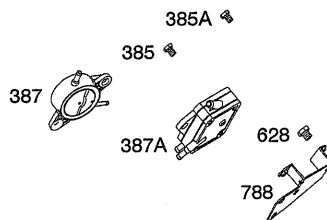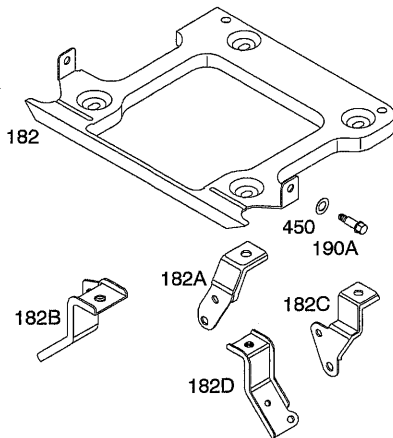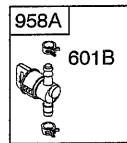

9 QUART

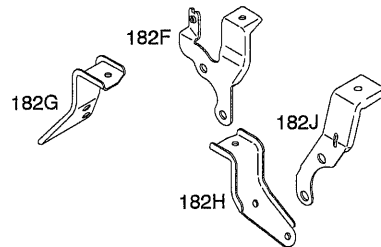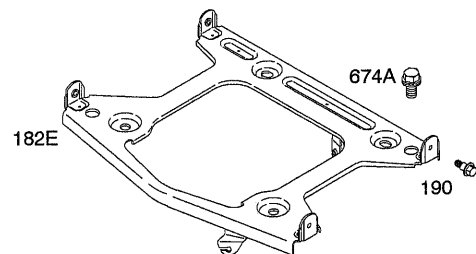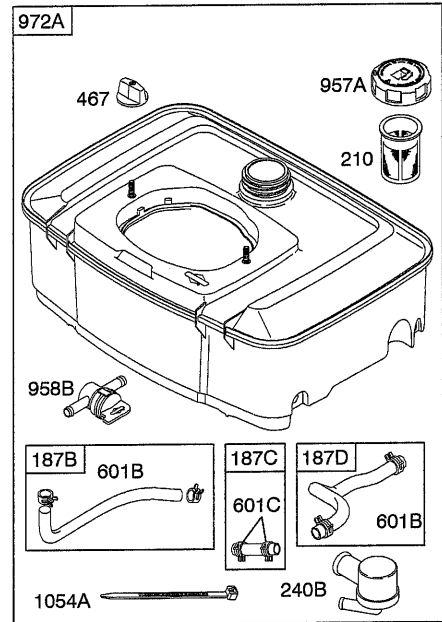

9691-10

Assemblies include all parts shown in frames.


08/24/2007

10


〒340-0022 埼玉県草加市瀬崎町631

株式会社 キ ク チ

TEL 048-922-5457
FAX 048-927-6505


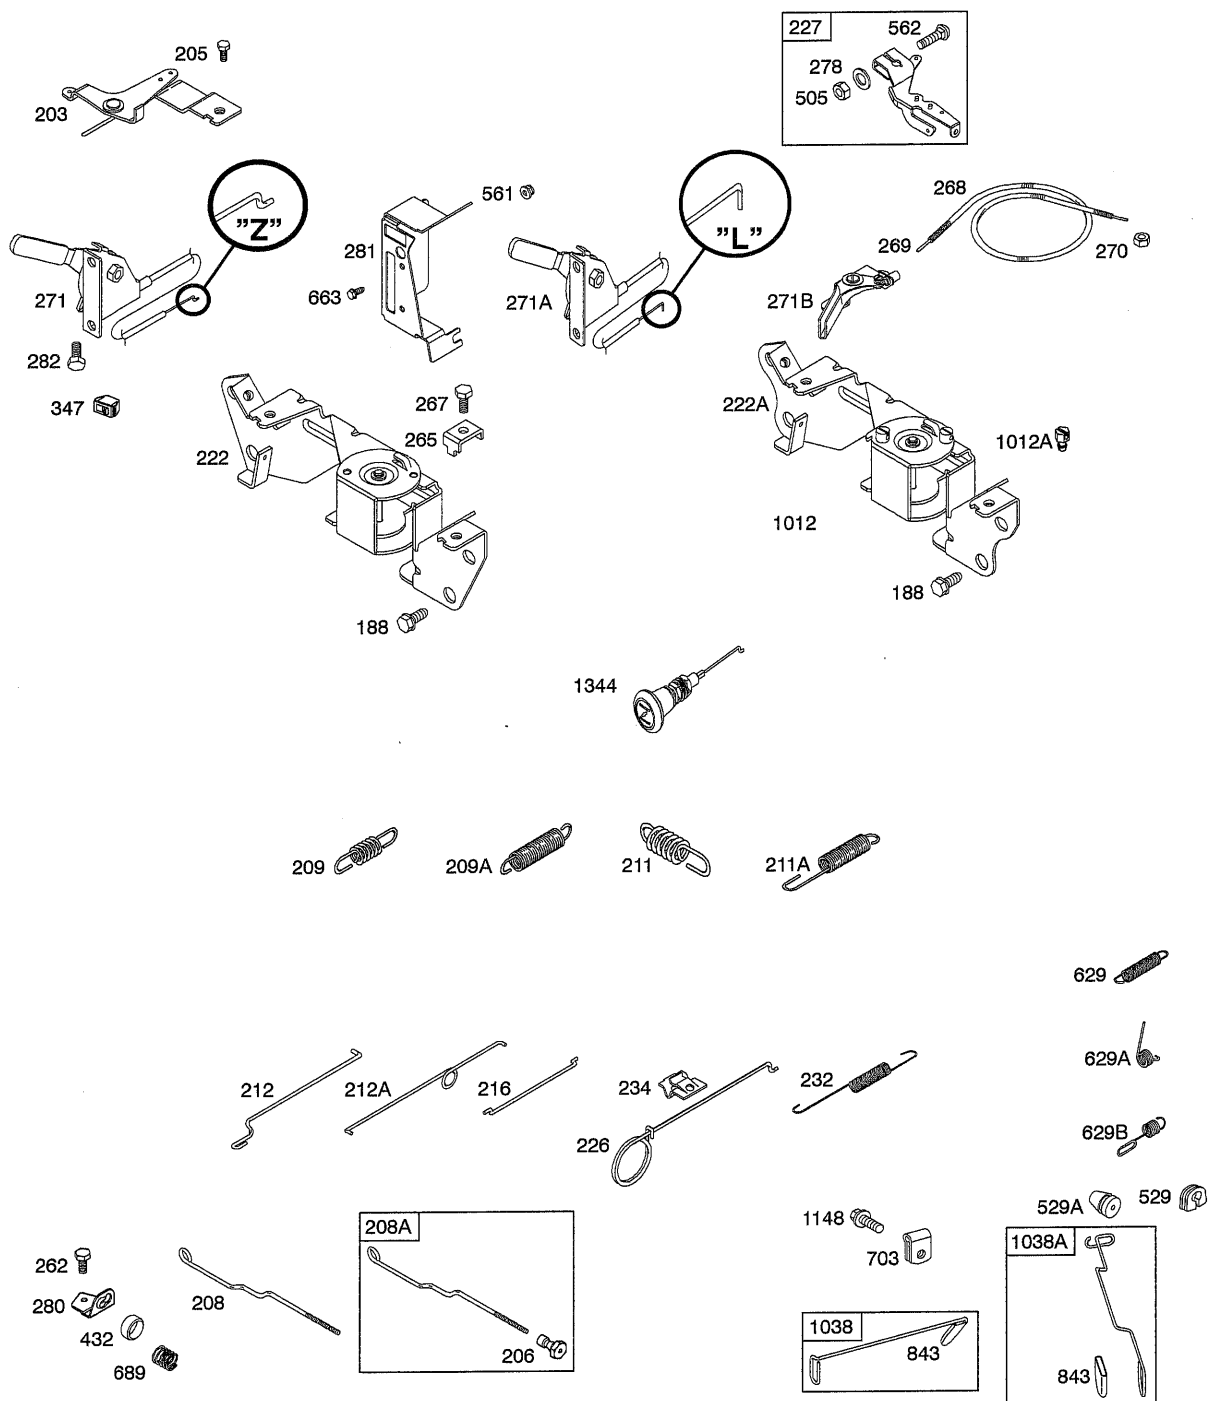


303400

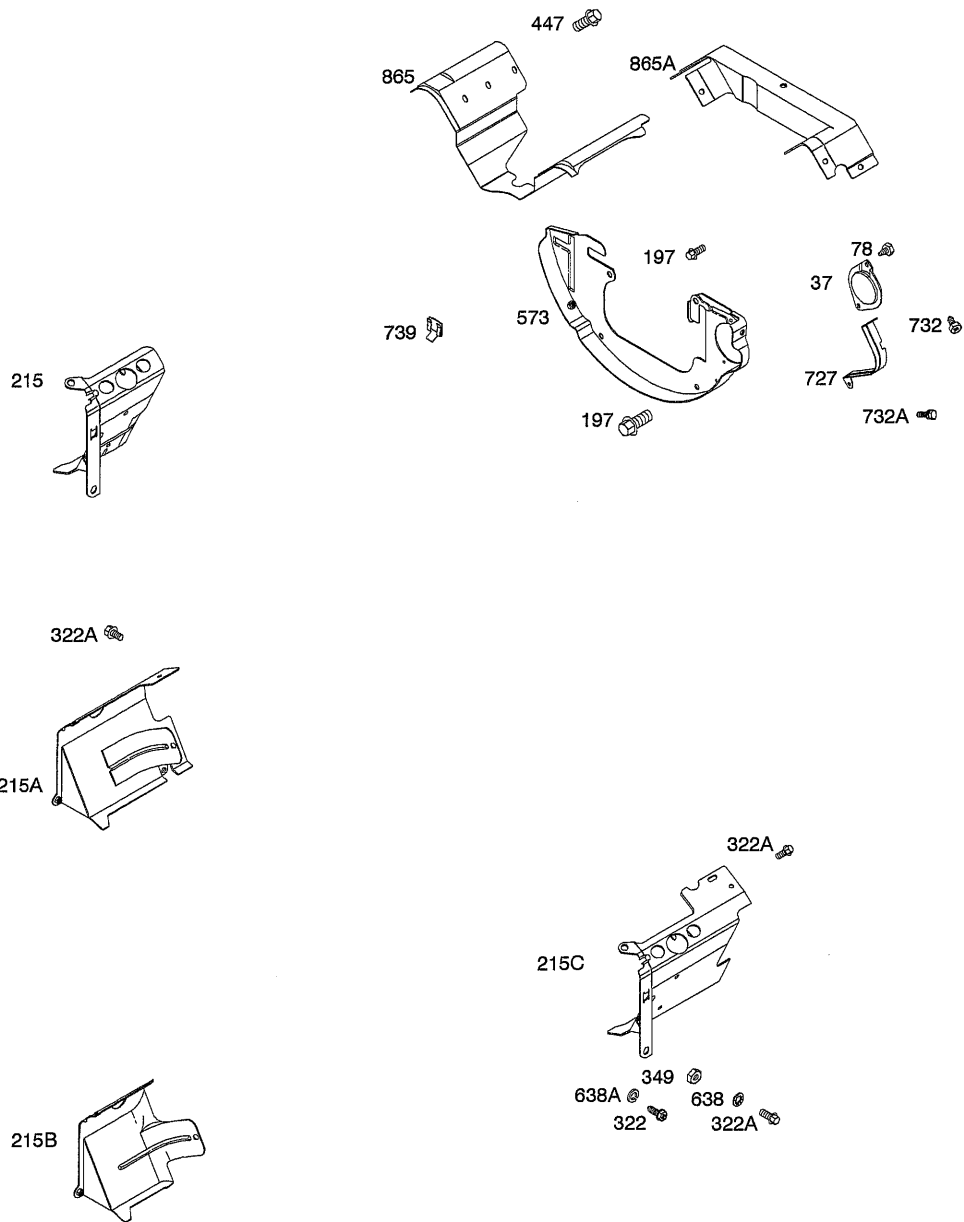


1036 EMISSIONS LABEL






METAL AIR CLEANER BASE

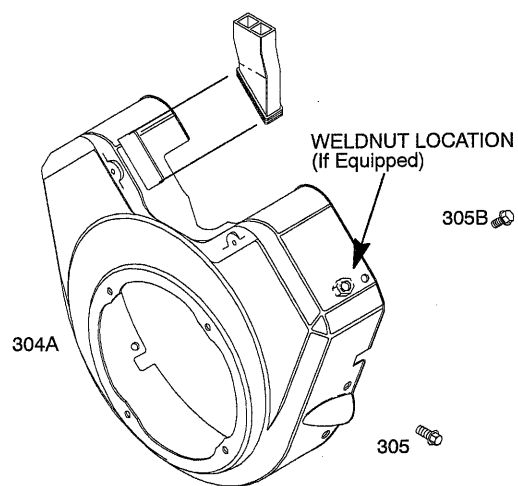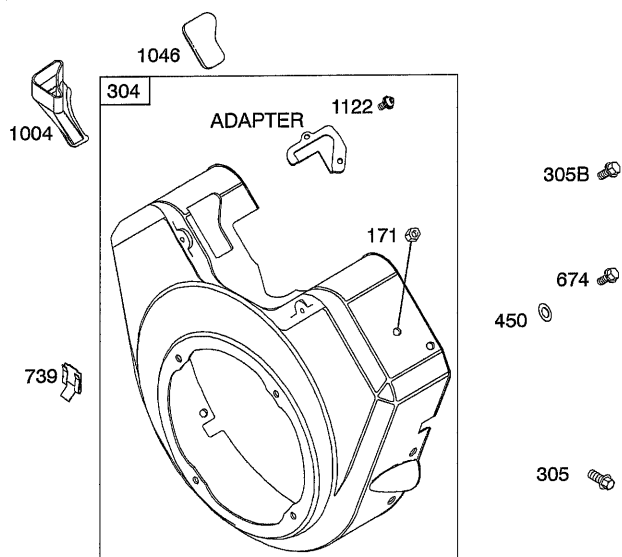


PLASTIC AIR CLEANER BASE




303400

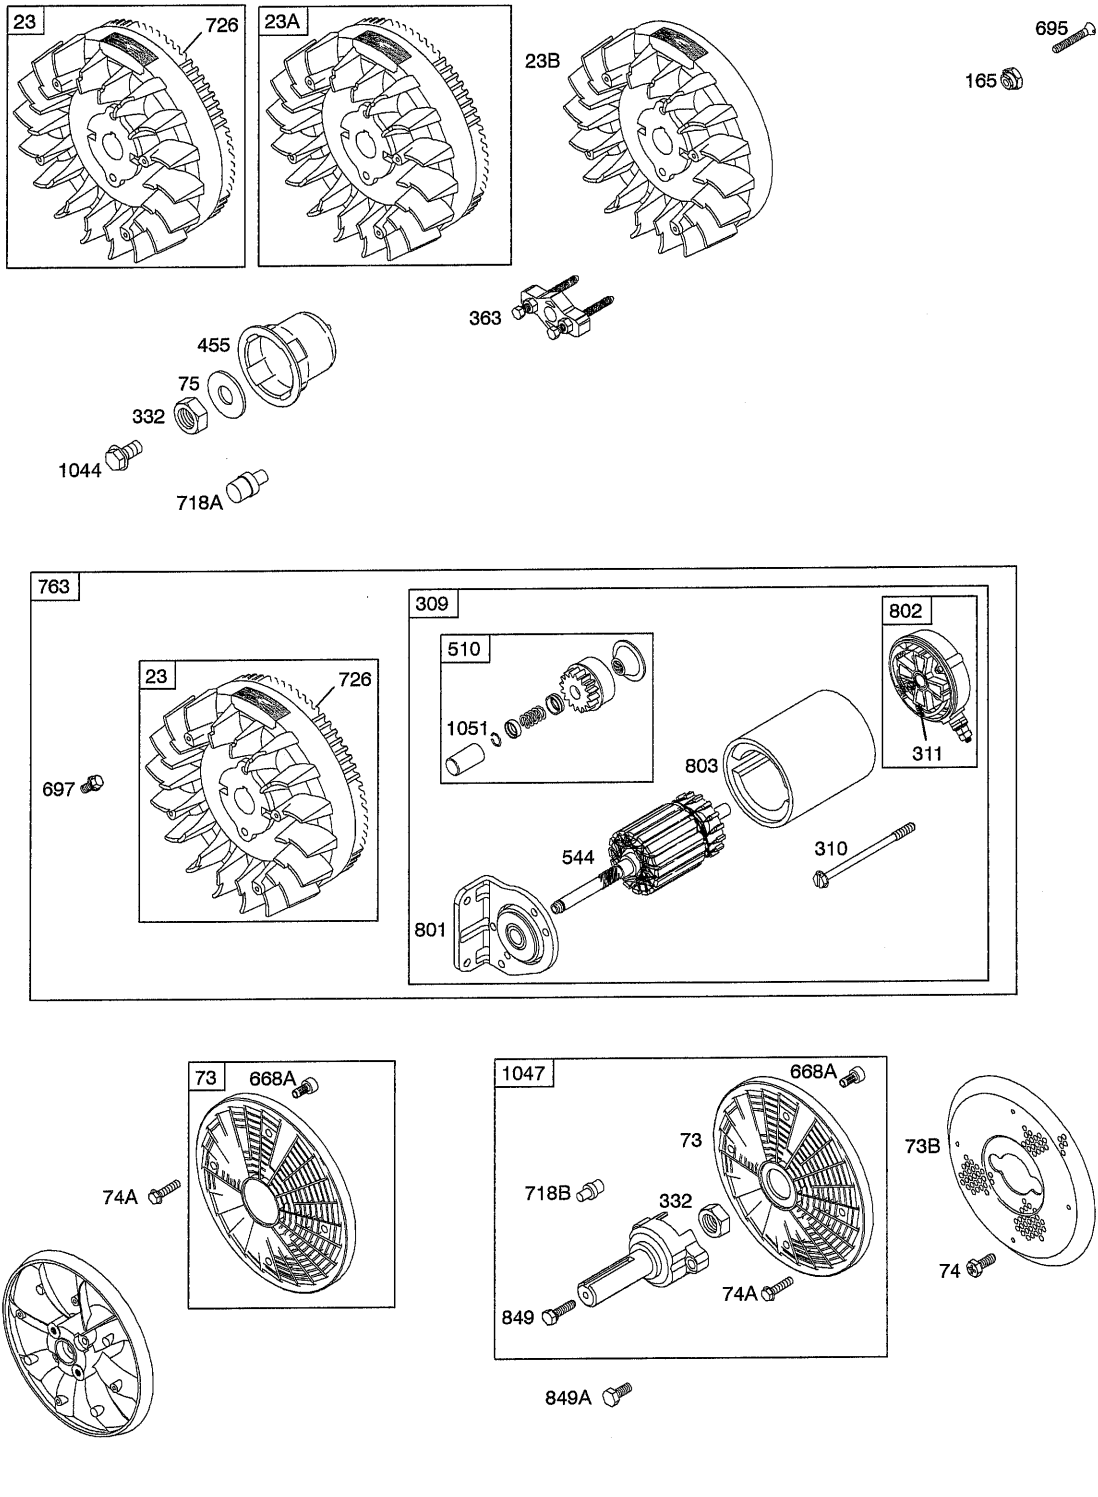

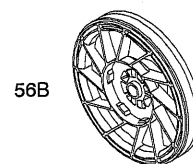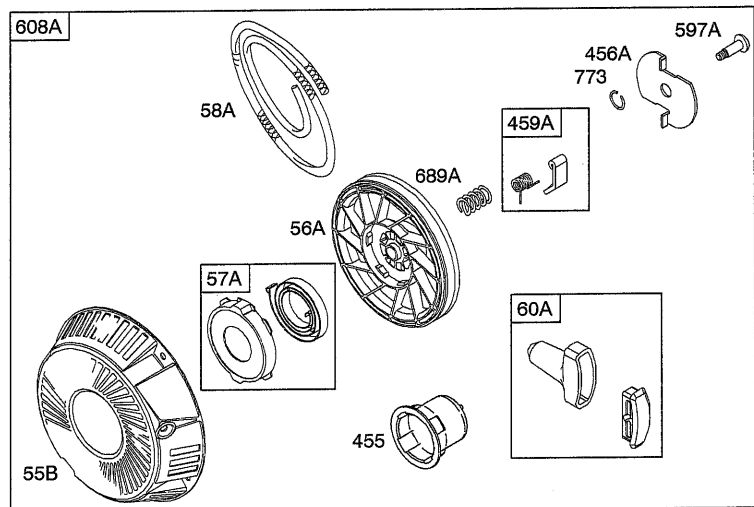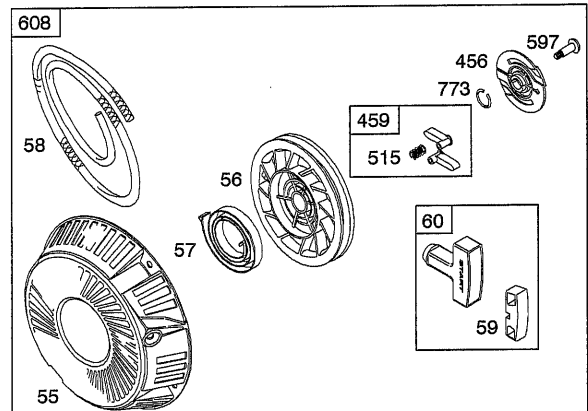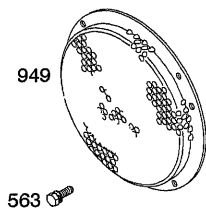
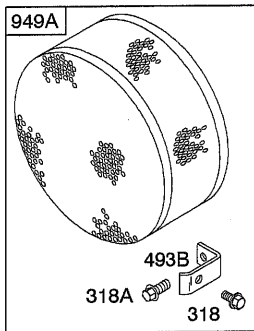


303400

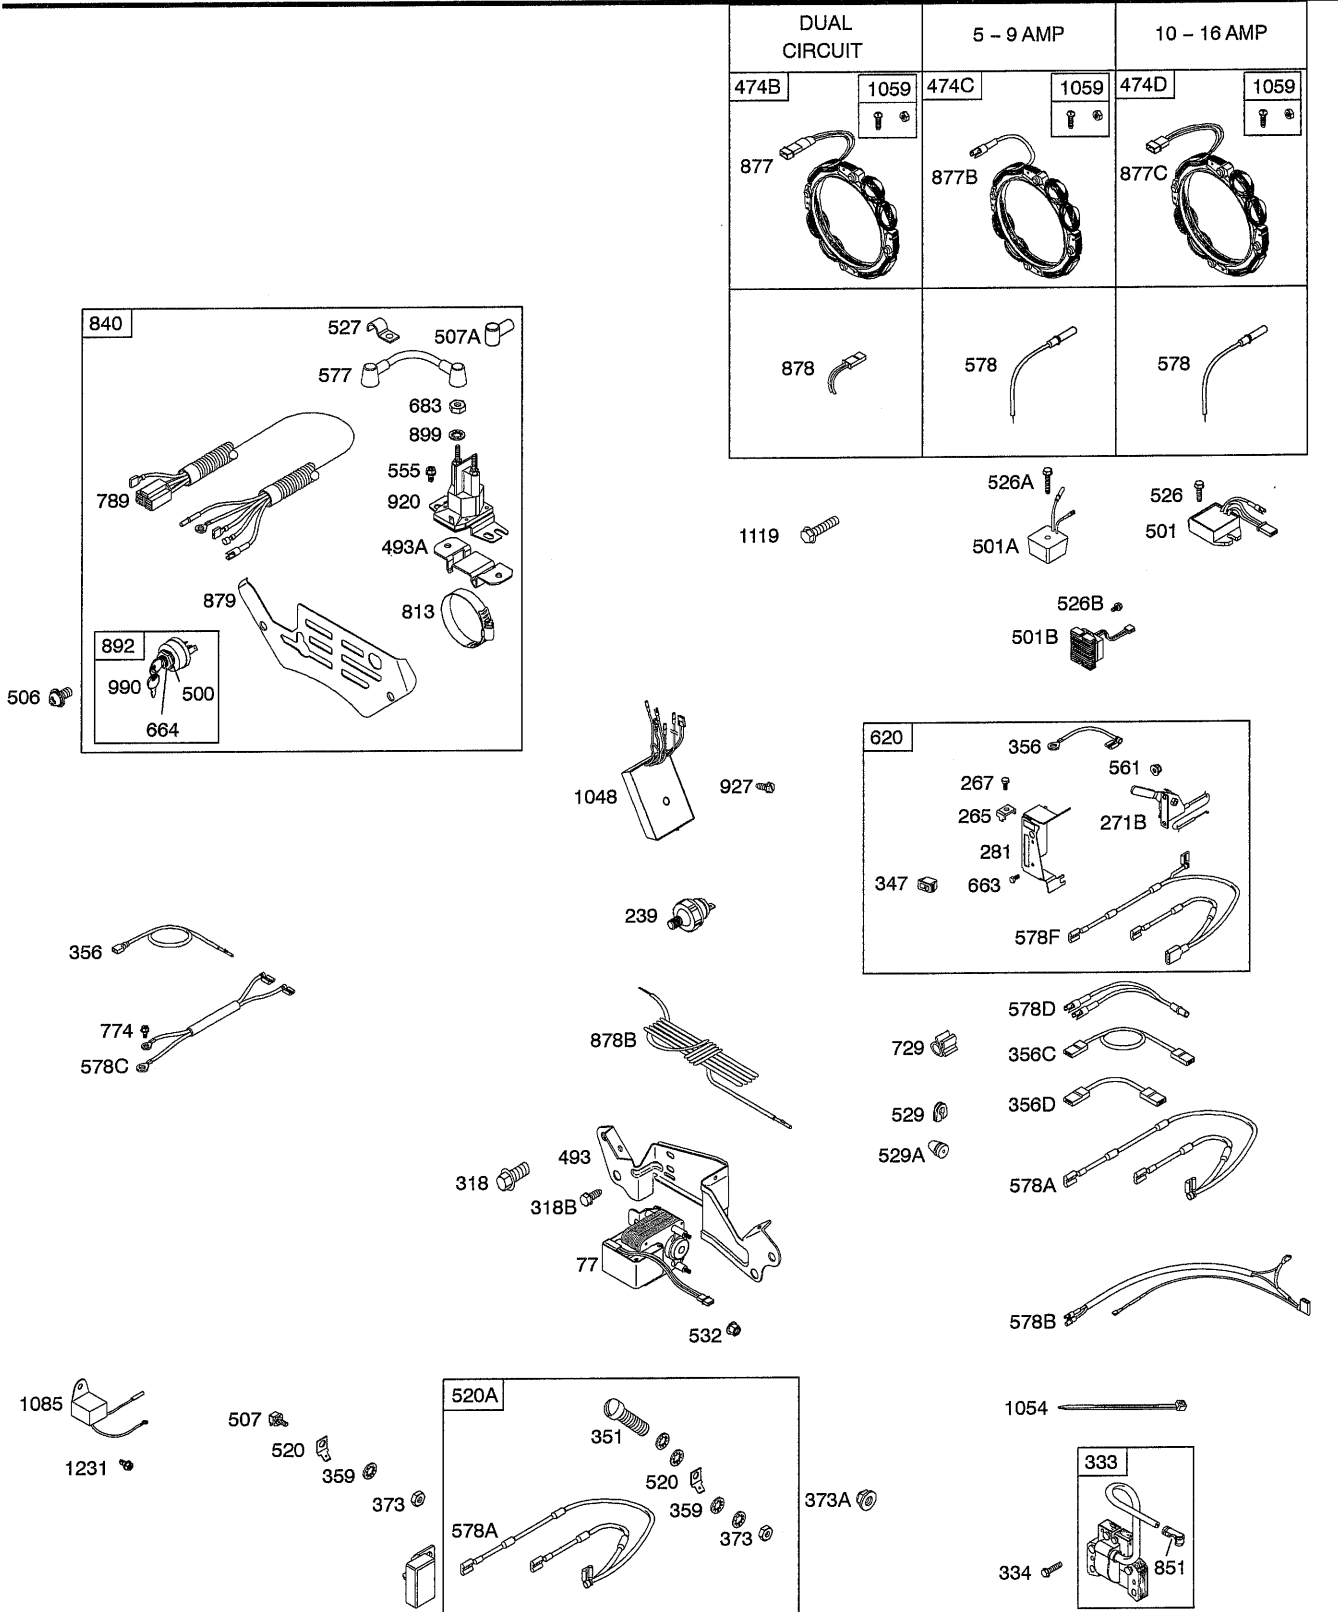

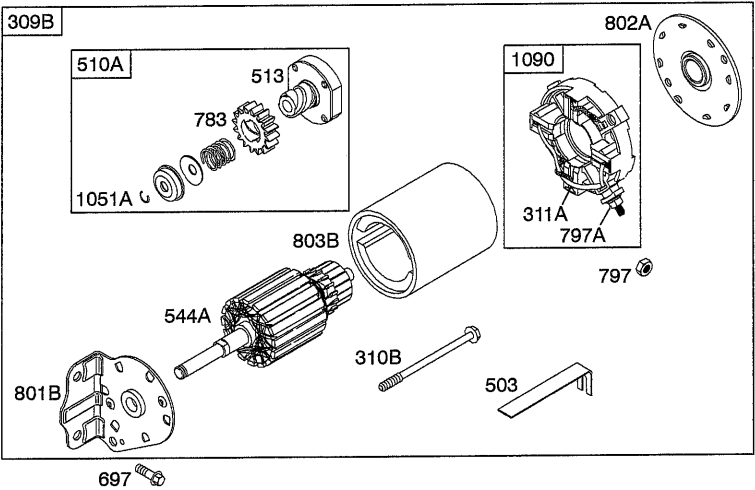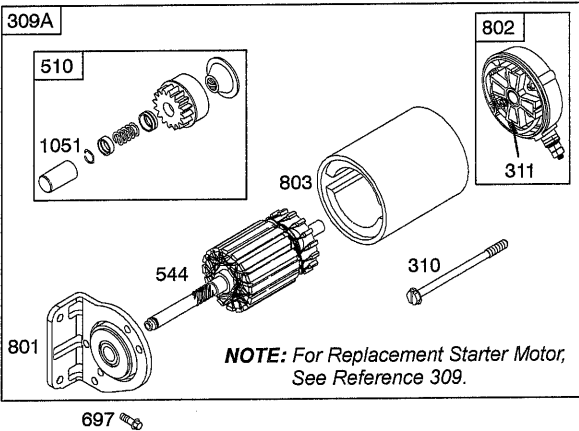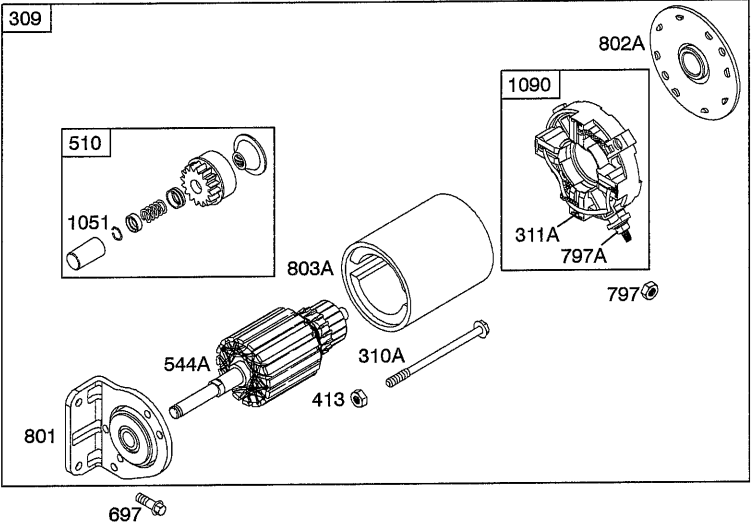

303400

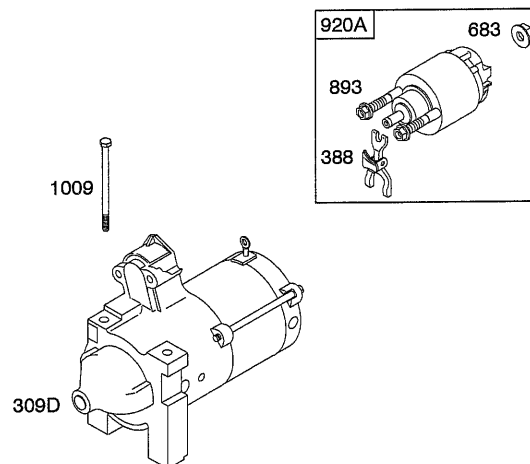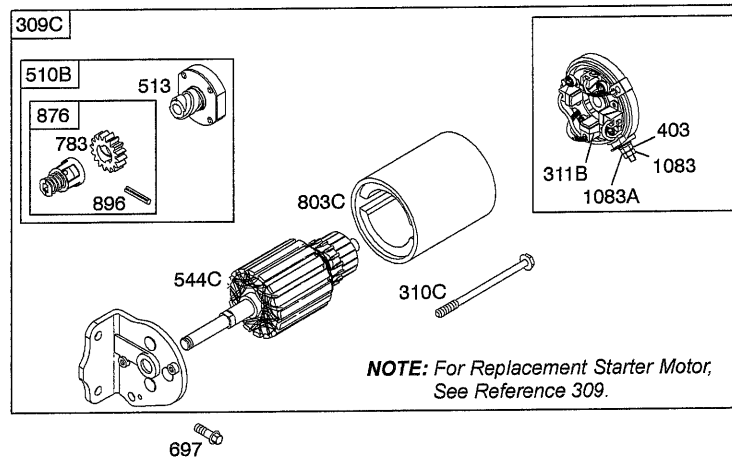

303400

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	692178	Cylinder Assembly (Used After Code Date 97043000). ----- Note ----- 807521 Cylinder Assembly (Used Before Code Date 97050100). 841081 Cylinder Assembly Used on Type No(s). 1340, 1341.	8	808984	Breather Assembly (Used Before Code Date 04060100).			692163 Crankshaft (Used After Code Date 97043000).
2	808534	Kit-Bushing/Seal (Magneto Side) (Used After Code Date 97043000). ----- Note ----- 807687 Kit- Bushing/Seal (Magneto Side) (Used Before Code Date 97050100).	9	809094	Gasket-Breather			Used on Type No(s). 1019, 1025, 1031, 1033, 1042, 1044, 1049, 1060, 1074, 1078, 1087, 1104, 1105, 1108, 1111, 1114, 1116, 1119, 1120, 1127, 1129, 1131, 1141, 1167, 1168, 1175, 1176, 1177, 1189, 1194, 1195, 1196, 1198, 1208, 1231, 1250, 1251, 1252, 1257, 1262, 1283, 1314, 1319, 1320, 1326, 1345, 1378, 1403, 1409.
3	805101S	Seal-Oil (Magneto Side)	10	690751	Screw (Breather Assembly) (Used After Code Date 90111400). ----- Note ----- 805194 Screw (Breather Assembly) 692162 Crankshaft (Used After Code Date 97043000). Used on Type No(s). 1009, 1051, 1077, 1171, 1256, 1377. 807590 Crankshaft (Used Before Code Date 97050100). Used on Type No(s). 0021, 0041, 0044, 0049, 0051, 0077, 0309, 0351, 0377, 0474, 1009, 1051, 1077, 1171, 1174, 1256.			
5	809200	Head-Cylinder (Cylinder 1)						
5A	809201	Head-Cylinder (Cylinder 2)	11	691556	Tube-Breather			
6	842122	Washer (Cylinder Head) (Used After Code Date 94043000). ----- Note ----- 805193 Washer (Cylinder Head) (Used Before Code Date 94050100).	11A	806083S	Tube-Breather			
			12	691684	Gasket-Crankcase			
			13	692059	Screw (Cylinder Head)			
			15	690946	Plug-Oil Drain			
7	806085S	Gasket-Cylinder Head (Graphoil) (Used After Code Date 96033100).	16	692161	Crankshaft (Used After Code Date 97043000). ----- Note ----- 807589 Crankshaft (Used Before Code Date 97050100). 692159 Crankshaft (Used After Code Date 97043000). Used on Type No(s). 1128, 1142, 1220. 807586 Crankshaft (Used Before Code Date 97050100). Used on Type No(s). 0440, 1128, 1142, 1220.			
7A	807986	Gasket-Cylinder Head (Metal) (Used Before Code Date 96040100).						

Engine Gasket Set-Reference 358A.
Carburetor Overhaul Kit-Reference 121, 121A or 121F

Valve Gasket Set-Reference 1095B

9691-19

Assemblies include all parts shown in frames.

08/24/2007

303400

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
		807745 Crankshaft (Used Before Code Date 97050100). Used on Type No(s). 0022, 0027, 0028, 0035, 0036, 0037, 0042, 0044, 0052, 0054, 0060, 0061, 0074, 0078, 0084, 0085, 0092, 0123, 0129, 0130, 0136, 0312, 0313, 0315, 0317, 0319, 0321, 0325, 0327, 0339, 0342, 0344, 0350, 0352, 0354, 0360, 0362, 0365, 0366, 0373, 0374, 0378, 0382, 0385, 0391, 0392, 0394, 0396, 0397, 0399, 0404, 0405, 0415, 0416, 0417, 0419, 0420, 0425, 0427, 0428, 0430, 0435, 0450, 0453, 0458, 0464, 0475, 0476, 0477, 0481, 0488, 0489, 0494, 0495, 0496, 0498, 0501, 0502, 0505, 0518, 1012, 1013, 1015, 1017, 1019, 1021, 1025, 1031, 1033, 1042, 1044, 1049, 1054, 1060, 1062, 1066, 1073, 1074, 1078, 1087, 1094, 1104, 1105, 1108, 1111, 1114, 1116, 1118, 1119, 1120, 1127, 1129, 1131, 1133, 1141, 1158, 1159, 1164, 1167, 1168, 1175, 1176, 1177, 1181, 1189, 1194, 1195, 1196, 1198, 1205, 1208, 1218, 1231, 1250, 1251, 1252, 1257, 1262.			692165 Crankshaft (Used After Code Date 97043000). Used on Type No(s). 1232, 1293, 1346, 1412, 1413, 1421, 1425, 1432, 1434, 1449. 692166 Crankshaft (Used After Code Date 97043000). Used on Type No(s). 1162. 807849 Crankshaft (Used Before Code Date 97050100). Used on Type No(s). 0133, 0412, 0462, 1112, 1162. 692167 Crankshaft (Used After Code Date 97043000). Used on Type No(s). 1138, 1149, 1191, 1192, 1217. 807851 Crankshaft (Used Before Code Date 97050100). Used on Type No(s). 0138, 0139, 0438, 0439, 0491, 0492, 1138, 1149, 1191, 1192, 1217. 692168 Crankshaft (Used After Code Date 97043000). Used on Type No(s). 1180. 808056 Crankshaft (Used Before Code Date 97050100). Used on Type No(s). 0456, 0480, 1180. 692169 Crankshaft (Used After Code Date 97043000). Used on Type No(s). 1238.			808296 Crankshaft (Used Before Code Date 97050100). Used on Type No(s). 1238. 808975 Crankshaft Used on Type No(s). 1348, 1381, 1410. 808740 Crankshaft Used on Type No(s). 1303, 1318, 1338, 1385. 17 690752 Bearing-Ball ----- Note ----- 691541 Bearing-Ball Used on Type No(s). 1238, 1256, 1313. 18 808847 Cover-Crankcase ----- Note ----- 808850 Cover- Crankcase Used on Type No(s). 0133, 0412, 1112, 1155, 1174. 808851 Cover- Crankcase Used on Type No(s). 1256, 1313. 808508 Cover- Crankcase Used on Type No(s). 1104, 1105, 1108, 1191, 1192, 1252, 1283, 1320, 1381, 1409, 1410. 808851 Cover- Crankcase (Used After Code Date 99072000). Used on Type No(s). 1238. 808850 Cover- Crankcase (Used Before Code Date 99072100). Used on Type No(s). 1238. 21 809500 Cap-Oil Fill 20 805049S Seal-Oil (PTO Side) 22 807362 Screw (Crankcase Cover/Sump)

Engine Gasket Set-Reference 358A
Carburetor Overhaul Kit-Reference 121, 121A or 121F

Valve Gasket Set-Reference 1095B

9691-20

Assemblies include all parts shown in frames.

08/24/2007

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
23	808766	Flywheel (Steel Ring Gear) ----- Note ----- 808774 Flywheel (Steel Ring Gear) Used on Type No(s). 1232, 1293, 1345, 1346, 1412, 1421, 1425, 1432, 1434. 808770 Flywheel (Steel Ring Gear) Used on Type No(s). 1057, 1110, 1236, 1278, 1295, 1306, 1311, 1322, 1331, 1348, 1384, 1416.	36	692084	Spring-Valve (Exhaust)	51A	692035	Gasket-Intake (Manifold to Head)
23A		Flywheel (For Replacement Flywheel, Order Part Number 808190 , Electric Starter Kit, Reference 763)) ----- Note ----- 692158 Flywheel (Aluminum Ring Gear) Used on Type No(s). 1041, 1057, 1278, 1295.	37	690715	Guard-Flywheel ----- Note ----- 841309 Guard- Flywheel Used on Type No(s). 1019, 1027, 1028, 1030, 1033, 1034, 1059, 1069, 1095, 1102, 1116, 1130, 1134, 1138, 1167, 1169, 1176, 1223, 1238, 1275, 1277, 1293, 1299, 1303, 1320, 1326, 1327, 1338, 1343, 1346, 1348, 1381, 1403, 1409, 1410, 1412, 1413, 1420, 1421, 1422, 1425, 1429, 1432, 1434, 1439, 1449, 1450.	51C	691694	Gasket-Intake (Carburetor To Manifold)
23B	690889	Flywheel (Rewind Starter)	39	690745	Deflector-Oil (Used After Code Date 98050700).	54	690676	Screw (Intake Manifold)
25	807619	Piston Assembly (Standard) ----- Note ----- 807809 Piston Assembly (.020" Oversize)	40	692058	Retainer-Valve	55	691568	Housing-Rewind Starter
26	807620	Ring Set (Standard) ----- Note ----- 807810 Ring Set (.020" Oversize)	42	807683	Keeper-Valve	55B	492193	Housing-Rewind Starter
27	690683	Lock-Piston Pin	45	690977	Tappet-Valve	56	692085	Pulley-Starter
28	807621	Pin-Piston (Standard)	46	691557	Camshaft ----- Note ----- 692157 Camshaft Used on Type No(s). 0404, 0405, 0491, 0492, 1104, 1105, 1108, 1191, 1192, 1252, 1283, 1320, 1381, 1409, 1410. 809148 Camshaft Used on Type No(s). 1319. 842064 Camshaft Used on Type No(s). 0129, 0130, 0138, 0139, 0438, 0439, 1138, 1149, 1217, 1345.	56A	280918	Pulley-Starter
29	807900S	Rod-Connecting (Standard) ----- Note ----- 807803 Rod- Connecting (.020" Undersize)	50	690754	Manifold-Intake	56B	281235	Pulley-Starter Used on Type No(s). 0448.
32	690698	Screw (Connecting Rod)	50A	692124	Manifold-Intake Used on Type No(s). 1279, 1381, 1409, 1410.	57	692086	Spring-Rewind Starter
33	807681	Valve-Exhaust				57A	492194	Spring-Rewind Starter
34	807680	Valve-Intake				58	66574	Rope-Starter (Cut To Required Length)
35	692084	Spring-Valve (Intake)				58A	695002	Rope-Starter (Cut To Required Length)
						59	805957	Insert-Grip
						60	808167	Grip-Starter Rope
						60A	490652	Grip-Starter Rope
						65	691982	Screw (Rewind Starter)
						65A	841233	Screw (Rewind Starter) (Used After Code Date 03120900).
						73	494439	Screen-Rotating (Flush)
						73B	690478	Screen-Rotating
						74	691655	Screw (Rotating Screen)
						74A	691647	Screw (Rotating Screen)
						75	691490	Washer (Flywheel)
						77	690819	Motor-Servo
						78	690688	Screw (Flywheel Guard)

Engine Gasket Set-Reference 358A.
Carburetor Overhaul Kit-Reference 121, 121A or 121F

Valve Gasket Set-Reference 1095B

303400

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
91	809208	Body-Upper Carburetor ----- Note ----- 808964 Body-Upper Carburetor Used on Type No(s). 1314, 1319, 1320, 1326, 1409. 808980 Body-Upper Carburetor Used on Type No(s). 1381, 1410.	117B	690862	Jet-Main (Standard) ----- Note ----- 806859 Jet-Main (Standard) Used on Type No(s). 1320, 1409. 690741 Jet-Main (Standard) Used on Type No(s). 1236, 1311, 1331. 690880 Jet-Main (Standard) Used on Type No(s). 1326. 842238 Jet-Main (Standard) Used on Type No(s). 1348. 842318 Jet-Main (Standard) Used on Type No(s). 1314, 1319.	118	842311	Jet-Main (High Altitude) (8500 Feet) ----- Note ----- 807114 Jet-Main (High Altitude) Used on Type No(s). 1320, 1409. 842836 Jet-Main (High Altitude) (5000 Feet) Used on Type No(s). 1314, 1319. 842837 Jet-Main (High Altitude) (6500 Feet) Used on Type No(s). 1314, 1319. 842839 Jet-Main (High Altitude) (9000 Feet) Used on Type No(s). 1314, 1319. 842841 Jet-Main (High Altitude) (5000 Feet) Used on Type No(s). 1348. 842318 Jet-Main (High Altitude) (6500 Feet) Used on Type No(s). 1348. 842842 Jet-Main (High Altitude) (9000 Feet) Used on Type No(s). 1348.
94	808257	Kit-Idle Mixture						
95	690718	Screw (Throttle Valve)						
97	809007	Shaft-Throttle (Used After Code Date 00071100). ----- Note ----- 807720 Shaft-Throttle (Used Before Code Date 00071200). 841498 Shaft-Throttle Used on Type No(s). 1326.						
97A	808973	Shaft-Throttle Used on Type No(s). 1408.						
97D	809095	Shaft-Throttle Used on Type No(s). 1320, 1381, 1409, 1410.						
98	808177	Kit-Idle Speed ----- Note ----- 807923 Kit-Idle Speed Used on Type No(s). 1331.						
98A	808981	Kit-Idle Speed Used on Type No(s). 1408.						
102A	692077	Gasket-Carburetor Body						
104	690723	Pin-Float Hinge						
105A	805620	Valve-Float Needle (Gravity Feed)						
108A	690719	Valve-Choke						
109A	808962	Shaft-Choke Used on Type No(s). 1314, 1319, 1320, 1326, 1409.						
109B	809096	Shaft-Choke						
110	806861	Washer (Choke Shaft)						

Engine Gasket Set-Reference 358A
Carburetor Overhaul Kit-Reference 121, 121A or 121F

Valve Gasket Set-Reference 1095B

9691-22

Assemblies include all parts shown in frames.

08/24/2007

303400

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
118A	807012	Jet-Main (High Altitude) (5,000-7,500 Feet) Used on Type No(s). 1381, 1410. ----- Note ----- 807011 Jet-Main (High Altitude) (Over 7,500 Feet) Used on Type No(s). 1381, 1410.	125B	809011	Carburetor (Pump Feed Without Solenoid) ----- Note ----- 809016 Carburetor (Pump Feed Without Solenoid) Used on Type No(s). 0393, 1182, 1236, 1311, 1331. 809013 Carburetor (Gravity Feed Without Solenoid) Used on Type No(s). 1008, 1012, 1017, 1021, 1023, 1025, 1027, 1028, 1030, 1031, 1033, 1034, 1035, 1036, 1040, 1041, 1047, 1048, 1049, 1054, 1055, 1057, 1058, 1062, 1066, 1068, 1070, 1072, 1073, 1076, 1087, 1094, 1095, 1107, 1111, 1113, 1114, 1116, 1118, 1124, 1130, 1131, 1134, 1138, 1140, 1141, 1144, 1145, 1148, 1149, 1157, 1158, 1159, 1169, 1171, 1172, 1174, 1178, 1181, 1191, 1192, 1194, 1208, 1214, 1217, 1218, 1219, 1223, 1231, 1238, 1240, 1246, 1251, 1255, 1258, 1262, 1267, 1275, 1276, 1277, 1298, 1299, 1300, 1303, 1323, 1327, 1341, 1343, 1345, 1368, 1427, 1434, 1439, 1450. 843130 Carburetor Used on Type No(s). 1326. (Used After Code Date 06072700). 841494 Carburetor Used on Type No(s). 1326. (Used Before Code Date 06072800).			809014 Carburetor (Gravity Feed With Solenoid) Used on Type No(s). 1112, 1210, 1235, 1237, 1285. 808972 Carburetor Used on Type No(s). 1408. 808979 Carburetor Used on Type No(s). 1381, 1410. 843129 Carburetor (Used After Code Date 06093000). Used on Type No(s). 1320, 1409. 809152 Carburetor (Used Before Code Date 06100100). Used on Type No(s). 1320, 1409. 842235 Carburetor Used on Type No(s). 1348. 842107 Carburetor Used on Type No(s). 1314, 1319.
119	690720	Screw (Upper To Lower Carburetor Body) ----- Note ----- 842761 Screw (Upper To Lower Carburetor Body) Used on Type No(s). 1314, 1319, 1348.				127	690727	Plug-Welch
121	809022	Kit-Carburetor Overhaul				130A	690726	Valve-Throttle
121A	809021	Kit-Carburetor Overhaul Used on Type No(s). 1023, 1027, 1028, 1030, 1033, 1034, 1049, 1057, 1068, 1095, 1116, 1130, 1134, 1138, 1140, 1145, 1149, 1169, 1171, 1172, 1194, 1214, 1223, 1231, 1236, 1237, 1238, 1251, 1255, 1258, 1275, 1276, 1277, 1285, 1298, 1299, 1300, 1303, 1306, 1311, 1312, 1313, 1318, 1322, 1323, 1327, 1330, 1331, 1338, 1341, 1343, 1345, 1368, 1408, 1420, 1425, 1427, 1429, 1434, 1435, 1439, 1440, 1450.				133A	806961	Float-Carburetor
						142A	690725	Nozzle-Carburetor (Standard) ----- Note ----- 842319 Nozzle-Carburetor (Standard) Used on Type No(s). 1314, 1319.
121F	809023	Kit-Carburetor Overhaul Used on Type No(s). 1409, 1410, 1413.				142B	806860	Nozzle-Carburetor (Standard) Used on Type No(s). 1381, 1409, 1410. ----- Note ----- 806987 Nozzle-Carburetor (Standard) Used on Type No(s). 1326.
122	690691	Spacer-Carburetor				146	691639	Key-Timing
						151	841185	Stud (Exhaust Manifold)

Engine Gasket Set-Reference 358A.
Carburetor Overhaul Kit-Reference 121, 121A or 121F

Valve Gasket Set-Reference 1095B

9691-23

Assemblies include all parts shown in frames.

08/24/2007

303400

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
161	691561	Base-Air Cleaner ----- Note ----- 842830 Base-Air Cleaner Used on Type No(s). 0452, 0463, 0468, 0490, 0493, 1131, 1152, 1188, 1190, 1193, 1269, 1291, 1292, 1296, 1297, 1315, 1334, 1335, 1344, 1381, 1410, 1420, 1422, 1428, 1433, 1436, 1437, 1444.	187B	692107	Line-Fuel			692071 Spring-Governor Used on Type No(s). 0064, 0093, 0132, 0364, 0393, 0440, 0443, 0482, 0486, 1018, 1052, 1064, 1093, 1128, 1131, 1142, 1143, 1153, 1182, 1186, 1220, 1236, 1272, 1281, 1290, 1344.
161B	808414	Base-Air Cleaner	187C	692106	Line-Fuel			
163	692081	Gasket-Air Cleaner	187D	692108	Line-Fuel			
163B	692052	Gasket-Air Cleaner ----- Note ----- 841823 Gasket-Air Cleaner Used on Type No(s). 1348.	188	692056	Screw (Control Bracket)			
			190	692199	Screw (Fuel Tank) ----- Note ----- 692056 Screw (Fuel Tank) Used on Type No(s). 1338.			
165	693148	Nut (Ring Gear)	190A	94536	Screw (Fuel Tank)			691508 Spring-Governor Used on Type No(s). 0045, 0345, 0423, 0446, 0451, 0456, 0480, 0497, 1151, 1157, 1170, 1180, 1197, 1200, 1224, 1232, 1269, 1282, 1297, 1316, 1337, 1412, 1413, 1421, 1425, 1432, 1434, 1443, 1445, 1449.
167	692297	Seal-Air Cleaner Nut	192	807623	Adjuster-Rocker Arm			
171	810056	Nut (Air Cleaner)	197	807163	Screw (Back Plate)			
182	492317	Bracket-Fuel Tank	203	690923	Crank-Bell			
182A	690778	Bracket-Fuel Tank	205	692083	Screw (Bell Crank)			
182B	690779	Bracket-Fuel Tank	206	691244	Nut-Governor Adjusting			
182C	690780	Bracket-Fuel Tank	208	691549	Rod-Governor Control (Used After Code Date 96033100).			
182D	690781	Bracket-Fuel Tank	208A	808453	Rod-Governor Control			
182E	841601	Bracket-Fuel Tank	209	692070	Spring-Governor ----- Note ----- 691506 Spring-Governor Used on Type No(s). 0022, 0028, 0036, 0037, 0042, 0044, 0052, 0078, 0129, 0130, 0342, 0344, 0352, 0378, 0396, 0415, 0425, 0450, 0462, 0494, 0498, 1042, 1044, 1078, 1162, 1194, 1198, 1257, 1378.			
182F	691520	Bracket-Fuel Tank			691507 Spring-Governor Used on Type No(s). 0326, 1026, 1270, 1314, 1319, 1326, 1330, 1426, 1454.			
182G	841600	Bracket-Fuel Tank			690710 Spring-Governor Used on Type No(s). 0493, 1193, 1291, 1334.			
182H	691524	Bracket-Fuel Tank						
182J	691525	Bracket-Fuel Tank						
187	791745	Line-Fuel (Cut To Required Length) ----- Note ----- 791766 Line-Fuel (Cut To Required Length) Used on Type No(s). 1340, 1344, 1347, 1348, 1381, 1385, 1387, 1420, 1429, 1436, 1444, 1449, 1454.						805630 Spring-Governor Used on Type No(s). 0129, 0130, 0138, 0139, 0438, 0439, 1138, 1149, 1217.
187A	791801	Line-Fuel (Molded)						806869 Spring-Governor Used on Type No(s). 1408.

Engine Gasket Set-Reference 358A
Carburetor Overhaul Kit-Reference 121, 121A or 121F

Valve Gasket Set-Reference 1095B

9691-24

Assemblies include all parts shown in frames.

08/24/2007

303400

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION						
209A	690709	Spring-Governor Used on Type No(s). 0027, 0036, 0054, 0060, 0061, 0074, 0084, 0085, 0092, 0123, 0133, 0136, 0312, 0313, 0315, 0317, 0319, 0321, 0325, 0327, 0339, 0350, 0354, 0360, 0362, 0365, 0366, 0373, 0374, 0382, 0385, 0391, 0392, 0394, 0397, 0399, 0412, 0416, 0417, 0419, 0420, 0427, 0428, 0430, 0435, 0453, 0458, 0464, 0475, 0476, 0477, 0481, 0488, 0489, 0495, 0496, 0501, 0502, 0505, 0518, 1012, 1013, 1015, 1017, 1019, 1021, 1025, 1031, 1033, 1049, 1054, 1060, 1062, 1066, 1073, 1074, 1087, 1094, 1111, 1112, 1114, 1116, 1118, 1119, 1120, 1127, 1129, 1131, 1133, 1141, 1158, 1159, 1164, 1167, 1168, 1175, 1176, 1177, 1181, 1189, 1195, 1196, 1205, 1208, 1218, 1231, 1250, 1251, 1262, 1403.	211A	692068	Spring-Governed Idle ----- Note ----- 690707 Spring-Governed Idle Used on Type No(s). 0027, 0036, 0054, 0060, 0061, 0074, 0084, 0085, 0092, 0123, 0133, 0136, 0312, 0313, 0315, 0317, 0319, 0321, 0325, 0327, 0339, 0350, 0354, 0360, 0362, 0365, 0366, 0373, 0374, 0382, 0385, 0391, 0392, 0394, 0397, 0399, 0412, 0416, 0417, 0419, 0420, 0427, 0428, 0430, 0435, 0453, 0458, 0464, 0475, 0476, 0477, 0481, 0488, 0489, 0495, 0496, 0501, 0502, 0505, 0518, 1012, 1013, 1015, 1017, 1019, 1021, 1025, 1031, 1033, 1049, 1054, 1060, 1062, 1066, 1073, 1074, 1087, 1094, 1111, 1112, 1114, 1116, 1118, 1119, 1120, 1127, 1129, 1131, 1133, 1141, 1158, 1159, 1164, 1167, 1168, 1175, 1176, 1177, 1181, 1189, 1195, 1196, 1205, 1208, 1218, 1231, 1250, 1251, 1262, 1403. 691553 Spring-Governed Idle Used on Type No(s). 1179, 1186, 1236, 1269, 1272, 1311, 1314, 1319, 1331, 1406.	212	690712	Link-Throttle	212A	691519	Link-Throttle	215	841183	Guide-Air (Used After Code Date 93072200). ----- Note ----- 807656 Guide-Air (Used Before Code Date 93072300). 841182 Guide-Air Used on Type No(s). 1252, 1343, 1344, 1345, 1346, 1444, 1450. 841316 Guide-Air (Cylinder 2) Used on Type No(s). 1454.
210	691370	Strainer-Fuel				215A	806544	Guide-Air						
211	692069	Spring-Governed Idle ----- Note ----- 691505 Spring-Governed Idle Used on Type No(s). 0326, 0369, 0386, 0433, 1026, 1086, 1278, 1348. 806868 Spring-Governed Idle Used on Type No(s). 1408.				215B	841317	Guide-Air (Cylinder 1)						
						215C	692805	Guide-Air (Used After Code Date 93072200). ----- Note ----- 807869 Guide-Air (Used After Code Date 90111600 and Before Code Date 93072300). 807657 Guide-Air (Used Before Code Date 90111700).						

Engine Gasket Set-Reference 358A.
Carburetor Overhaul Kit-Reference 121, 121A or 121F

Valve Gasket Set-Reference 1095B

9691-25

Assemblies include all parts shown in frames.

08/24/2007

303400

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
216	690705	Link-Choke	271	692541	Lever-Control (Cable Wire With "Z" Formed End)	300		Muffler (For Replacement Muffler, Use 692099 , Reference 300D)
217	806862	Spring-Choke Return	271A	692105	Lever-Control (Cable Wire With "L" Formed End)	300A	807742	Muffler (Cylinder 2) (Side Outlet)
222	808454	Bracket-Control (Used With Control Lever And/Or Wire With "Z" Formed End) (Used After Code Date 94113000).	271B	691028	Lever-Control	300B	498984S	Muffler (Super Lo Tone)
222A	690918	Bracket-Control (Used With Control Lever And/Or Wire With "L" Formed End) ----- Note ----- 691570 Bracket- Control Used on Type No(s). 0414, 0478, 1114, 1178, 1314, 1319, 1326, 1348.	273	690681	Seal-O Ring (Oil Pump)	300C	807752	Muffler (Low Mount)
226	692075	Rod-Hand Choke	276	690704	Washer-Sealing	300D	692099	Muffler (Low Mount)
227	690236	Lever-Governor Control	276A	807085	Washer-Sealing (Cylinder Head) (Used After Code Date 01120200). ----- Note ----- 691766 Washer- Sealing (Cylinder Head) (Used Before Code Date 01120300).	300E	690906	Muffler (Cylinder 1) (Side Outlet) (Starter Motor Side)
231	690718	Screw (Choke Valve)	276B	690724	Washer-Sealing (Carburetor Plug)	300F	690931	Muffler (Hi Mount) (Starter Side Exit)
232	692073	Spring-Governor Link	276C	806137	Washer-Sealing (Solenoid) Used on Type No(s). 1236, 1252, 1311, 1331, 1334, 1347, 1387, 1409, 1436, 1445, 1454.	300H	807831	Muffler (Cylinder 1) (Side Outlet) (Starter Motor Side)
234	691723	Clip-Control Rod	276F	693497	Washer-Sealing	300J	807799	Muffler (Cylinder 2) (Side Outlet) (Oil Filter Side)
239	690233	Switch-Oil Pressure (Lower) ----- Note ----- 491657s Switch- Oil Pressure (Normally Closed)	278	842122	Washer (Governor Control Lever)	300L	808380	Muffler (Cylinder 1) (Side Outlet) (Starter Motor Side)
240	298090S	Filter-Fuel	280	691526	Bracket-Rod	304	808055	Housing-Blower (Red) (Without Weld Nut) (For Metal Air Cleaner)
240A	691035	Filter-Fuel	281	690742	Panel-Control	304A	808408	Housing-Blower (Black) (Without Weld Nut) (For Plastic Air Cleaner Base)
240B	808116S	Filter-Fuel	282	692083	Screw (Control Lever)	305	841233	Screw (Blower Housing) ----- Note ----- 692056 Screw (Blower Housing) (14 mm Long) 807163 Screw (Blower Housing) (10mm Long)
255	690721	Bushing-Choke Shaft	287	806660	Screw (Dipstick Tube) (Special)	305B	692062	Screw (Blower Housing) (18mm Long)
262	692083	Screw (Rod Bracket)	287A	692062	Screw (Dipstick Tube)			
265	691024	Clamp-Casing						
267	692083	Screw (Casing Clamp)						
268	691025	Casing-Control Wire (Cut To Required Length)						
269	691026	Wire-Control (Cut To Required Length)						
270	691027	Nut (Control Wire Casing)						

Engine Gasket Set-Reference 358A
Carburetor Overhaul Kit-Reference 121, 121A or 121F

Valve Gasket Set-Reference 1095B

9691-26

Assemblies include all parts shown in frames.

08/24/2007

303400

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
309	691564	Motor-Starter (Steel Ring Gear Only)	337	491055S	Plug-Spark	356	690796	Wire-Stop
309A		Motor-Starter (For Replacement Starter Motor, Order Reference 309)			----- Note -----	356D	807594	Wire-Stop (Cylinder 1)
309B	499521	Motor-Starter (For Aluminum Ring Gear Only)			496018S Plug-Spark Used on Type No(s). 0411, 0451, 0452, 0456, 0479, 0480, 0482, 0483, 1151, 1152, 1179, 1182, 1183, 1188, 1200, 1236, 1282, 1331.	357	691483	Key-Drive Pulley
309C		Motor-Starter (For Aluminum Ring Gear Only) (For Replacement Starter Motor, Order Reference 309)			792015 Plug-Spark Used on Type No(s). 1019, 1023, 1026, 1029, 1033, 1034, 1046, 1049, 1068, 1074, 1075, 1077, 1078, 1079, 1105, 1116, 1130, 1145, 1167, 1168, 1169, 1171, 1176, 1177, 1206, 1223, 1228, 1231, 1239, 1256, 1258, 1270, 1288, 1291, 1292, 1293, 1294, 1295, 1296, 1297, 1298, 1300, 1302, 1308, 1312, 1313, 1315, 1316, 1323, 1327, 1328, 1334, 1335, 1336, 1337, 1340, 1341, 1346, 1347, 1368, 1375, 1377, 1378, 1379, 1382, 1387, 1403, 1409, 1410, 1412, 1413, 1421, 1425, 1428, 1432, 1433, 1434, 1436, 1437, 1438, 1443, 1444, 1445, 1448, 1449, 1454.	358A	842722	Gasket Set-Engine (Used After Code Date 01120200). ----- Note ----- 808390 Gasket Set-Engine (Used Before Code Date 01120300).
309D	808817	Motor-Starter Used on Type No(s). 1340, 1341.				359	691077	Washer (Ground Terminal)
310	496880	Screw (Starter Motor) (4 1/4" Long)				363	19203	Puller-Flywheel
310A	690323	Screw (Starter Motor) (4 7/16" Long)				365A	690711	Screw (Carburetor)
310B	691263	Screw (Starter Motor) (4 3/16" Long)				373	691612	Nut (Ground Terminal)
310C	692329	Screw (Starter Motor) (5-3/8" Long)				373A	690713	Nut (Ground Terminal)
311	496887	Brush Set				377	808095	Key-Woodruff
311A	497608	Brush Set				383	19374S	Wrench-Spark Plug ----- Note ----- 19576S Wrench-Spark Plug Used on Type No(s). 1206, 1228, 1297, 1316, 1328, 1337, 1347, 1413, 1433, 1438, 1443, 1444, 1445, 1448, 1449.
311B	490311	Brush Set (For 4 9/16" Housing Length)				385	807084	Screw (Fuel Pump) ----- Note ----- 692537 Screw (Fuel Pump) Used on Type No(s). 1434.
318	806870	Screw (Mounting Bracket)				385A	693169	Screw (Fuel Pump)
318A	691982	Screw (Mounting Bracket)				387	808656	Pump-Fuel
318B	690932	Screw (Mounting Bracket)				387A	808969	Pump-Fuel Used on Type No(s). 1179, 1180, 1233, 1282, 1408.
321	690379	Fan-Booster	338	691312	Gasket-Dipstick	388	820799	Lever-Pinion Drive Used on Type No(s). 1340, 1341.
322	841233	Screw (Cylinder Head Cover)	346	690661	Screw (Spark Arrestor)	403	690288	Washer (End Cap)
322A	692067	Screw (Cylinder Head Cover)	347	691995	Switch-Rocker (Without Light)	413	693587	Nut (Starter Motor)
331	691075	Washer (Booster Fan)	349	690238	Nut (Cylinder Head Cover)	415	690283	Plug (Intake Manifold)
332	690887	Nut (Flywheel)	351	691615	Screw (Ground Terminal)			
333	492341	Armature-Magneto	355	842122	Washer (Muffler Bracket)			
334	692066	Screw (Magneto Armature)	355A	690944	Washer (Muffler Bracket)			

Engine Gasket Set-Reference 358A.
Carburetor Overhaul Kit-Reference 121, 121A or 121F

Valve Gasket Set-Reference 1095B

9691-27

Assemblies include all parts shown in frames.

08/24/2007

303400

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
432	691509	Cap-Spring	456	691529	Plate-Pawl Friction	503	691532	Strap-Starter
436	692061	Manifold-Exhaust (Cylinder 2) (Side Outlet)	456A	224228	Plate-Pawl Friction	505	690238	Nut (Governor Control Lever)
436A	691499	Manifold-Exhaust (Cylinder 2) (Side Outlet)	459	808166	Pawl-Ratchet	506	690677	Screw (Carburetor Cover)
436B	691501	Manifold-Exhaust (Cylinder 1) (Side Outlet)	459A	492431	Pawl-Ratchet	507	691972	Insulator
436D	691502	Manifold-Exhaust (Used With Muffler Supplied By Customer)	467	691985	Knob-Air Cleaner	507A	281223	Insulator
436F	805609	Manifold-Exhaust (Used With Muffler Supplied By Customer)	467A	690895	Knob-Air Cleaner	510	496881	Drive-Starter (Used With Steel Ring Gear)
437	691902	Screw (Exhaust Manifold)	467B	691668	Knob-Air Cleaner	510A	696541	Drive-Starter
439	692154	Seal-O Ring (Crankcase Cover/Sump) (Used After Code Date 97043000).	468	690690	Seal-O Ring (Oil Pump Screen)	510B	696540	Drive-Starter (4 3/8" Housing Length)
		----- Note -----	474B	696459	Alternator Used on Type No(s). 1293, 1346, 1412, 1421, 1425, 1432, 1434.	513	692024	Clutch-Drive
		805198 Seal-O Ring (Crankcase Cover/Sump) (Used Before Code Date 97050100).	474C	696457	Alternator (5 To 9 Amp Regulated)	515	691528	Spring-Pawl
					----- Note -----	520	691084	Terminal-Ground
					696458 Alternator Used on Type No(s). 1236, 1252, 1344, 1347, 1387, 1436, 1444.	520A	809077	Terminal-Ground (Ignition Shutoff)
			474D	696579	Alternator (20 Amp) Used on Type No(s). 1057, 1110, 1236, 1278, 1295, 1306, 1311, 1322, 1331, 1348, 1384, 1416.	523	692100	Dipstick (Standard) (Used Before Code Date 98060100).
440	690335	Screw (Booster Fan)	479	807084	Screw (Oil Pump Screen)	523A	693175	Dipstick (Special) (Used After Code Date 98053100).
440A	690342	Screw (Booster Fan)	493	691518	Bracket-Mounting (Regulator)	524	693172	Seal-Dipstick Tube (Used After Code Date 98053100).
445	394018S	Filter-Air Cleaner Cartridge	493A	691177	Bracket-Mounting (Regulator)			----- Note -----
445A	805113	Filter-Air Cleaner Cartridge	493B	691503	Bracket-Mounting			281370S Seal- Dipstick Tube (Used Before Code Date 98060100).
445B	393957S	Filter-Air Cleaner Cartridge	500	691086	Washer (Key Switch)			
447	841233	Screw (Air Guide Cover)	501	691185	Regulator (10 Amp Regulator)			
450	806497	Washer (Fuel Tank Bracket)	501A	691188	Regulator (5 To 9 Amp Regulated)			
455	691517	Cup-Flywheel (Used After Code Date 93072500).	501B	691573	Regulator (20 Amp) Used on Type No(s). 1041, 1057, 1110, 1236, 1278, 1295, 1322, 1331, 1348, 1384.			
		----- Note -----						
		805153 Cup-Flywheel (Used Before Code Date 93072600).						

Engine Gasket Set-Reference 358A
Carburetor Overhaul Kit-Reference 121, 121A or 121F

Valve Gasket Set-Reference 1095B

9691-28

Assemblies include all parts shown in frames.

08/24/2007

303400

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
525	693174	Tube-Dipstick (Used After Code Date 98053100).	544		Armature-Starter (Service With 691564 Starter Motor Only)	608	692102	Starter-Rewind (Used After Code Date 93072500).
525A	693173	Tube-Dipstick (Used After Code Date 98053100). Used on Type No(s). 1131, 1147, 1197, 1233, 1270, 1279, 1311, 1314, 1319, 1320, 1326, 1344, 1409.	544A		Armature-Starter (Serviced By 499521 Starter Motor Only)	608A	808152	Starter-Rewind (Used Before Code Date 93072600). ----- Note -----
525C	690897	Tube-Dipstick (Used Before Code Date 98060100). ----- Note ----- 690907 Tube-Dipstick (Used Before Code Date 98060100). Used on Type No(s). 0310, 0446, 0447, 0497, 1147, 1197, 1233, 1270, 1279, 1296.	544C	490309	Armature-Starter			494926 Starter-Rewind (Used Before Code Date 93072600). Used on Type No(s). 0448.
526	692067	Screw (Regulator)(10-16 Amp Regulated)	552	690701	Bushing-Governor Crank (Output End)	613	691902	Screw (Muffler)
526A	690717	Screw (Regulator)(5 To 9 Amp Regulated) (Used After Code Date 90021100). ----- Note ----- 810084 Screw (Regulator)(5 To 9 Amp Regulated) (Used Before Code Date 90021200).	552A	806686	Bushing-Governor Crank (Flanged)	613A	692067	Screw (Muffler)
526B	691547	Screw (Regulator)(10-16 Amp Regulated) Used on Type No(s). 1041, 1057, 1110, 1236, 1278, 1295, 1322, 1331, 1348, 1384.	555	692067	Screw (Starter Solenoid)	615	691550	Retainer-Governor Shaft
527	690423	Clamp-Tube	561	690713	Nut (Control Lever)	616	806685	Crank-Governor (Used After Code Date 99072000).
529	690744	Grommet	562	690239	Bolt (Governor Control Lever)	616A	690899	Crank-Governor (Used Before Code Date 99072100).
529A	691527	Grommet	563	691982	Screw (Debris Screen Guard)	620	494052	Panel-Speed Control
532	691115	Nut (Mounting Bracket)	565	690682	Stud (Oil Filter Adapter)	628	806660	Screw (Fuel Pump Bracket)
			572	690686	Baffle-Breather (Used Before Code Date 04060100).	629	806717	Spring-Throttle Return
			573	841310	Plate-Back (Black) ----- Note ----- 841127 Plate-Back (Black) Used on Type No(s). 1340, 1341.	629A	806716	Spring-Throttle Return ----- Note ----- 807004 Spring-Throttle Return (Used After Code Date 01032800). Used on Type No(s). 1320, 1381, 1409, 1410. 806863 Spring-Throttle Return (Used Before Code Date 01032900). Used on Type No(s). 1314, 1381, 1409, 1410.
			577	690795	Cable-Starter	629B	692088	Spring-Throttle Return Used on Type No(s). 0404, 0405, 1104, 1105, 1108, 1283.
			578	692306	Wire Assembly			
			578A	692319	Wire Assembly (Ignition Coil)			
			578B	691377	Wire Assembly			
			578C	690809	Wire Assembly			
			578D	692961	Wire Assembly			
			578E	807593	Wire Assembly (Cylinder 2)			
			578F	691999	Wire Assembly (Ignition Coil)			
			596	691492	Screw (Oil Pump)			
			597	690876	Screw (Pawl Friction Plate)			
			597A	94463	Screw (Pawl Friction Plate)			
			598	807625	Shim-End Play (Crankshaft)			
			601	691038	Clamp-Hose			
			601A	805813	Clamp-Hose			
			601B	791850	Clamp-Hose			
			601C	691522	Clamp-Hose			

Engine Gasket Set-Reference 358A.
Carburetor Overhaul Kit-Reference 121, 121A or 121F

Valve Gasket Set-Reference 1095B

9691-29

Assemblies include all parts shown in frames.

08/24/2007

303400

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
633	806131	Seal-Choke/Throttle Shaft	677	810079	Screw (Muffler Deflector)	728	691514	Screw (Heat Shield)
633B	690722	Seal-Choke/Throttle Shaft	677A	690688	Screw (Muffler Deflector)	728B	805704	Screw (Heat Shield)
633C	807003	Seal-Choke/Throttle Shaft Used on Type No(s). 1320, 1381, 1409, 1410.	677B	690661	Screw (Muffler Deflector)	729	690586	Clip-Wire
635	692076	Boot-Spark Plug	681	808798	Kit-Needle/Seat	732	690688	Screw (Starter Drive Cover)
637	806999	Washer (Throttle Shaft)	683	691029	Nut (Starter Solenoid)	732A	841233	Screw (Starter Drive Cover) (Used After Code Date 03120900).
637A	807000	Washer (Throttle Shaft)	689	691272	Spring-Friction	737	690679	Screw (Oil Filter Adapter)
638	691551	Washer (Cylinder Head Cover) (Lock Tooth) (Used Before Code Date 03110100).	689A	262564	Spring-Friction	739	690451	Clip-Debris
638A	690706	Washer (Cylinder Head Cover) (Spring)	691	690680	Seal-Governor Shaft	741	691530	Gear-Timing
643	692079	Retainer-Air Filter	695	693109	Screw (Ring Gear)	742	807001	Retainer-E Ring
643A	690447	Retainer-Air Filter	697	692062	Screw (Drive Cap)	763	808190	Kit-Electric Starter (For 12 Volt Gear Drive) (Aluminum Ring Gear) Used on Type No(s). 1232, 1293.
643B	691730	Retainer-Air Filter	703	94484	Clip	773	690875	Retainer
650	841233	Screw (Oil Deflector)	706	805484	Washer (Breather Assembly) (Used Before Code Date 90111500).	774	692067	Screw (Stop Wire)
		----- Note -----	710	807689	Cover-Oil Filter	783	695708	Gear-Pinion (Services Aluminum Ring Gear Only)
		691982 Screw (Oil Deflector) Used on Type No(s). 1444.	711A	691492	Screw (Carburetor Shield)	788	691559	Bracket-Fuel Pump
663	692083	Screw (Control Panel)			----- Note -----	789	691996	Harness-Wiring
664	691087	Nut (Key Switch)	711B	690699	Screw (Carburetor Shield)			----- Note -----
668A	691500	Spacer	718	806469	Pin-Locating			691578 Harness-Wiring Used on Type No(s). 1041, 1057, 1110, 1278, 1295, 1306, 1322, 1331, 1348, 1384, 1416.
674	692056	Screw (Fuel Tank Bracket)	718A	805102	Pin-Locating (Used Before Code Date 90091100).			841318 Harness-Wiring Used on Type No(s). 1340, 1341.
674A	692062	Screw (Fuel Tank Bracket)	718B	690740	Pin-Locating	797	691029	Nut (Brush Retainer)
676	393761	Deflector-Muffler (Side Out)	725	280866	Shield-Heat	797A	693167	Nut (Brush Retainer)
676A	397630	Deflector-Muffler (Louvered)	725B	805844	Shield-Heat	801	808778	Cap-Drive
676B	396903	Deflector-Muffler (Direct Out)			----- Note -----	801B	691283	Cap-Drive
676C	495518	Deflector-Muffler	725C	806102	Shield-Heat	802	496813	Cap-End
676D	808394	Deflector-Muffler	725D	805702	Shield-Heat	802A	691286	Cap-End
			726		Gear-Ring (Steel)(See Reference 23 for Service)			
			726A	807805	Gear-Ring (Aluminum)			
			727	841313	Cover-Starter Drive (Black)			

Engine Gasket Set-Reference 358A
Carburetor Overhaul Kit-Reference 121, 121A or 121F

Valve Gasket Set-Reference 1095B

9691-30

Assemblies include all parts shown in frames.

08/24/2007

303400

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
803	690854	Housing-Starter	833	841233	Screw (Air Cleaner Mounting Strap/Stud)	868	691963	Seal-Valve
803A	693547	Housing-Starter				871	692057	Bushing-Valve Guide
803B		Housing-Starter (Serviced By 499521 tarter Motor Only)	833A	690872	Screw (Air Cleaner Mounting Strap/Stud) (Used After Code Date 97103100).	875	690894	Base-Air Cleaner (Plastic)
803C	494205	Housing-Starter (For 4 3/8" Housing Length) ----- Note ----- 398892 Housing-Starter (For 4 9/16" Housing Length)	833B	691593	Screw (Air Cleaner Mounting Strap/Stud)	876	696539	Kit-Pinion Spring
807	805557	Spacer-Throttle	836	691514	Screw (Muffler Guard)	877	393456	Wire/Connector-Alternator
812	692055	Nut (Rocker Cover) (Used Before Code Date 01120300).	836A	692067	Screw (Muffler Guard)	877B	393537	Wire/Connector-Alternator
813	690635	Clamp	837	808085	Spacer-Muffler	877C	399916	Wire/Connector-Alternator
816	690706	Washer (Oil Filter Adapter)	840	842828	Kit-Panel (Used After Code Date 05011800). ----- Note ----- 692096 Kit-Panel (Used Before Code Date 05011900).	878	398661	Harness-Alternator (Dual Circuit)
819	690297	Screw (Muffler Bracket) (Used After Code Date 97012300). ----- Note ----- 692198 Screw (Muffler Bracket) (Used Before Code Date 97012400).	842	690611	Seal-O Ring (Dipstick Tube)	878B	691362	Harness-Alternator
819A	690943	Screw (Muffler Bracket) (16mm Long) ----- Note ----- 692056 Screw (Muffler Bracket) (14mm Long)	843	691322	Sleeve-Lever	879	842829	Cover-Carburetor (Used After Code Date 06011900) ----- Note ----- 690757 Cover-Carburetor (Used Before Code Date 06011800) 841130 Cover-Carburetor Used on Type No(s). 1385.
819C	692537	Screw (Muffler Bracket) ----- Note ----- 692067 Screw (Muffler Bracket) (12 mm Long)	849	691088	Screw (Stub Shaft)	882	692074	Flange-Exhaust
819D	692062	Screw (Muffler Bracket)	849A	690342	Screw (Stub Shaft)	883	691613	Gasket-Exhaust
830	809157	Stud-Rocker Arm (Used After Code Date 96033100). ----- Note ----- 691497 Stud-Rocker Arm (Used Before Code Date 96040100).	851	493880S	Terminal-Spark Plug	884	690898	Clamp-Muffler
832	691571	Guard-Muffler	862	692153	Strap/Stud-Air Cleaner Mounting	884A	691956	Clamp-Muffler
			862C	807563	Strap/Stud-Air Cleaner Mounting	892	692318	Switch-Key
			862D	691565	Strap/Stud-Air Cleaner Mounting	893	820805	Nut (Starter Solenoid) Used on Type No(s). 1340, 1341.
			862E	492133	Strap/Stud-Air Cleaner Mounting	896	691641	Pin-Drive Retainer
			863	691513	Bracket-Muffler (Cylinder 2 Side)	899	691077	Washer (Starter Solenoid)
			863A	690756	Bracket-Muffler (Cylinder 2 Side)			
			863B	805610	Bracket-Muffler			
			865	841312	Cover-Air Guide			
			865A	690908	Cover-Air Guide Used on Type No(s). 0310, 0446, 0447, 0497, 1147, 1197, 1270, 1279. ----- Note ----- 841319 Cover-Air Guide Used on Type No(s). 1029, 1154, 1180, 1216, 1222, 1454.			

Engine Gasket Set-Reference 358A.
Carburetor Overhaul Kit-Reference 121, 121A or 121F

Valve Gasket Set-Reference 1095B

9691-31

Assemblies include all parts shown in frames.

08/24/2007

303400

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
918	393815	Hose-Vacuum (Rocker Cover To Impulse Pump) (Cut To Required Length)	972	492369	Tank-Fuel (7 Quart)	1027	842921	Filter-Oil
920	691656	Solenoid-Starter	972A	690663	Tank-Fuel (9 Quart)	1028	808235	Adapter-Oil Filter
920A	825418	Solenoid-Starter Used on Type No(s). 1340, 1341.	987	807002	Seal-Throttle Shaft	----- Note -----		
927	691116	Screw (Electronic Governor Module)	987A	806864	Seal-Throttle Shaft	808033 Adapter-Oil Filter		
947	842239	Solenoid-Fuel Used on Type No(s). 1314, 1319, 1348.	988	692063	Gasket-Oil Adapter	(For Horizontal Mounted Oil Filter)		
947A	692094	Solenoid-Fuel	988A	690687	Gasket-Oil Adapter	Used on Type No(s).		
949	690475	Guard-Debris Screen	990	691959	Key Set	1030, 1041, 1042,		
949A	808226	Guard-Debris Screen	994	392390	Arrestor-Spark	1046, 1047, 1048,		
955A	807723	Plug-Carburetor (Jet)	996	691577	Shield-Carburetor	1052, 1057, 1068,		
----- Note -----			996C	690696	Shield-Carburetor	1086, 1093, 1104,		
808176 Plug- Carburetor			----- Note -----			1108, 1125, 1142,		
Used on Type No(s).			841826 Shield- Carburetor			1149, 1165, 1189,		
1314, 1319, 1348.			Used on Type No(s).			1193, 1194, 1198,		
957	491367S	Cap-Fuel Tank	1004	690743	Duct-Air	1220, 1224, 1227,		
957A	493988S	Cap-Fuel Tank	1004B	692538	Duct-Air (Used With Plastic Air Cleaner Base)	1228, 1242, 1247,		
958	698182	Valve-Fuel Shut Off	1009	806474	Screw (Starter Motor)	1252, 1257, 1262,		
958A	698183	Valve-Fuel Shut Off Used on Type No(s). 1293, 1346, 1412, 1413, 1421, 1432, 1449.	1012	690592	Retainer-Link	1267, 1276, 1278,		
958B	692008	Valve-Fuel Shut Off	1012A	691521	Retainer-Link	1279, 1283, 1285,		
967A	272490S	Filter-Pre Cleaner	1017	690900	Screen-Oil Pump	1291, 1295, 1297,		
967B	805267S	Filter-Pre Cleaner	1022	806039S	Gasket-Rocker Cover	1312, 1313, 1315,		
967C	271794S	Filter-Pre Cleaner	1023	690758	Cover-Rocker (Used After Code Date 03103100).	1330, 1334, 1345,		
968A	699959	Cover-Air Cleaner	1023B	691494	Cover-Rocker (Used Before Code Date 03110100).	1347, 1368, 1437, 1439.		
968B	690694	Cover-Air Cleaner	1023C	690910	Cover-Rocker	1029	807323	Arm-Rocker
----- Note -----			1023D	691558	Cover-Rocker	1030	691496	Support-Rocker Arm
841822 Cover-Air Cleaner			1023E	691531	Cover-Rocker	1031	690693	Shaft-Rocker Arm
Used on Type No(s).			1024	693185	Pump-Oil	1036	Label-Emissions (Available from a Authorized Briggs & Stratton Dealer)	
1348.			1025	690689	Spool-Governor	1038	492374	Rod-Fuel Shut Off
968C	691910	Cover-Air Cleaner	1026	691836	Rod-Push (Steel)	1038A	691567	Rod-Fuel Shut Off
968E	691334	Cover-Air Cleaner	----- Note -----			1044	692056	Screw (Flywheel)
971	807084	Screw (Air Cleaner Base to Carburetor)	691758 Rod-Push (Aluminum)			1046	692082	Plug-Blower Housing
971A	690699	Screw (Air Cleaner Base to Carburetor)				1047	841580	Shaft-Stub
971B	692537	Screw (Air Cleaner Base to Carburetor)				1048	690669	Module-Electronic Governor (Used After Code Date 98102700).
						1051	691124	Ring-Retaining
						1051A	691265	Ring-Retaining
						1054	280275	Tie-Cable
						1054A	710349	Tie-Cable
						1058	276343	Operator's Manual
						1059	698516	Kit-Screw/Washer
						1083	691626	Nut (End Cap)
						1083A	690958	Nut (End Cap)

Engine Gasket Set-Reference 358A
Carburetor Overhaul Kit-Reference 121, 121A or 121F

Valve Gasket Set-Reference 1095B

9691-32

Assemblies include all parts shown in frames.

08/24/2007

303400

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1085	809093	Module-Ignition	1122	93410	Screw (Blower Housing Adapter)	1319	794467	Label-Warning
1090	691293	Retainer-Brush				1330	272144	Repair Manual
1091	691516	Cap-Limiter	1135	806497	Washer (Fuel Pump Bracket)	1344	841129	Cable-Choke Used on Type No(s). 1385.
1095B	842723	Gasket Set-Valve (Used After Code Date 01120200).	1148	94504	Screw (Clip)	1346	492031	Valve-Oil Drain Shut Off Used on Type No(s). 1334, 1443, 1444, 1445.
		----- Note -----	1176	842067	Nut (Exhaust Manifold)			
		808392 Gasket Set-Valve (Used Before Code Date 01120300).	1231	692067	Screw (Ignition Module)			
1100	791959	Pivot-Rocker Arm	1254	807084	Screw (Rocker Cover Stud) (Used After Code Date 01120200).			
1119	691552	Screw (Alternator)						

Engine Gasket Set-Reference 358A.
Carburetor Overhaul Kit-Reference 121, 121A or 121F

Valve Gasket Set-Reference 1095B

9691-33

Assemblies include all parts shown in frames.

08/24/2007