



FORM MS-5761-08/22/2006
REPLACES FORM MS-5761-06/06/2006
FILE IN SECT. 2 OF SERVICE MANUAL

356400

Illustrated Parts List

Model Series

356400

TYPE NUMBERS
0065 through 1415.

TABLE OF CONTENTS


Air Cleaner	7
Alternator	15
Blower Housing	12
Camshaft	2
Carburetor	6
Controls	10
Crankcase Cover	4
Crankshaft	2
Cylinder	2
Cylinder Head	3
Electric Starter	16 & 17
Exhaust System	8
Flywheel	13
Fuel Supply	9
Gasket Set - Engine	2
Gasket Set - Valve	3
Governor Spring	10
Ignition	15
Intake Manifold	4
Kit - Carburetor Overhaul	6
Lubrication	5
Piston, Rings, Connecting Rod	2
Rewind Starter	14
Shrouds	11
Valves	3







BRIGGS & STRATTON



PRINTED IN U.S.A.

COPYRIGHT by BRIGGS & STRATTON CORPORATION
All rights reserved. No part of this material may be reproduced or transmitted,
in any form or by any means, electronic or mechanical, including photocopying,
recording or by any information storage and retrieval system, without permission
in writing from Briggs & Stratton Corporation.



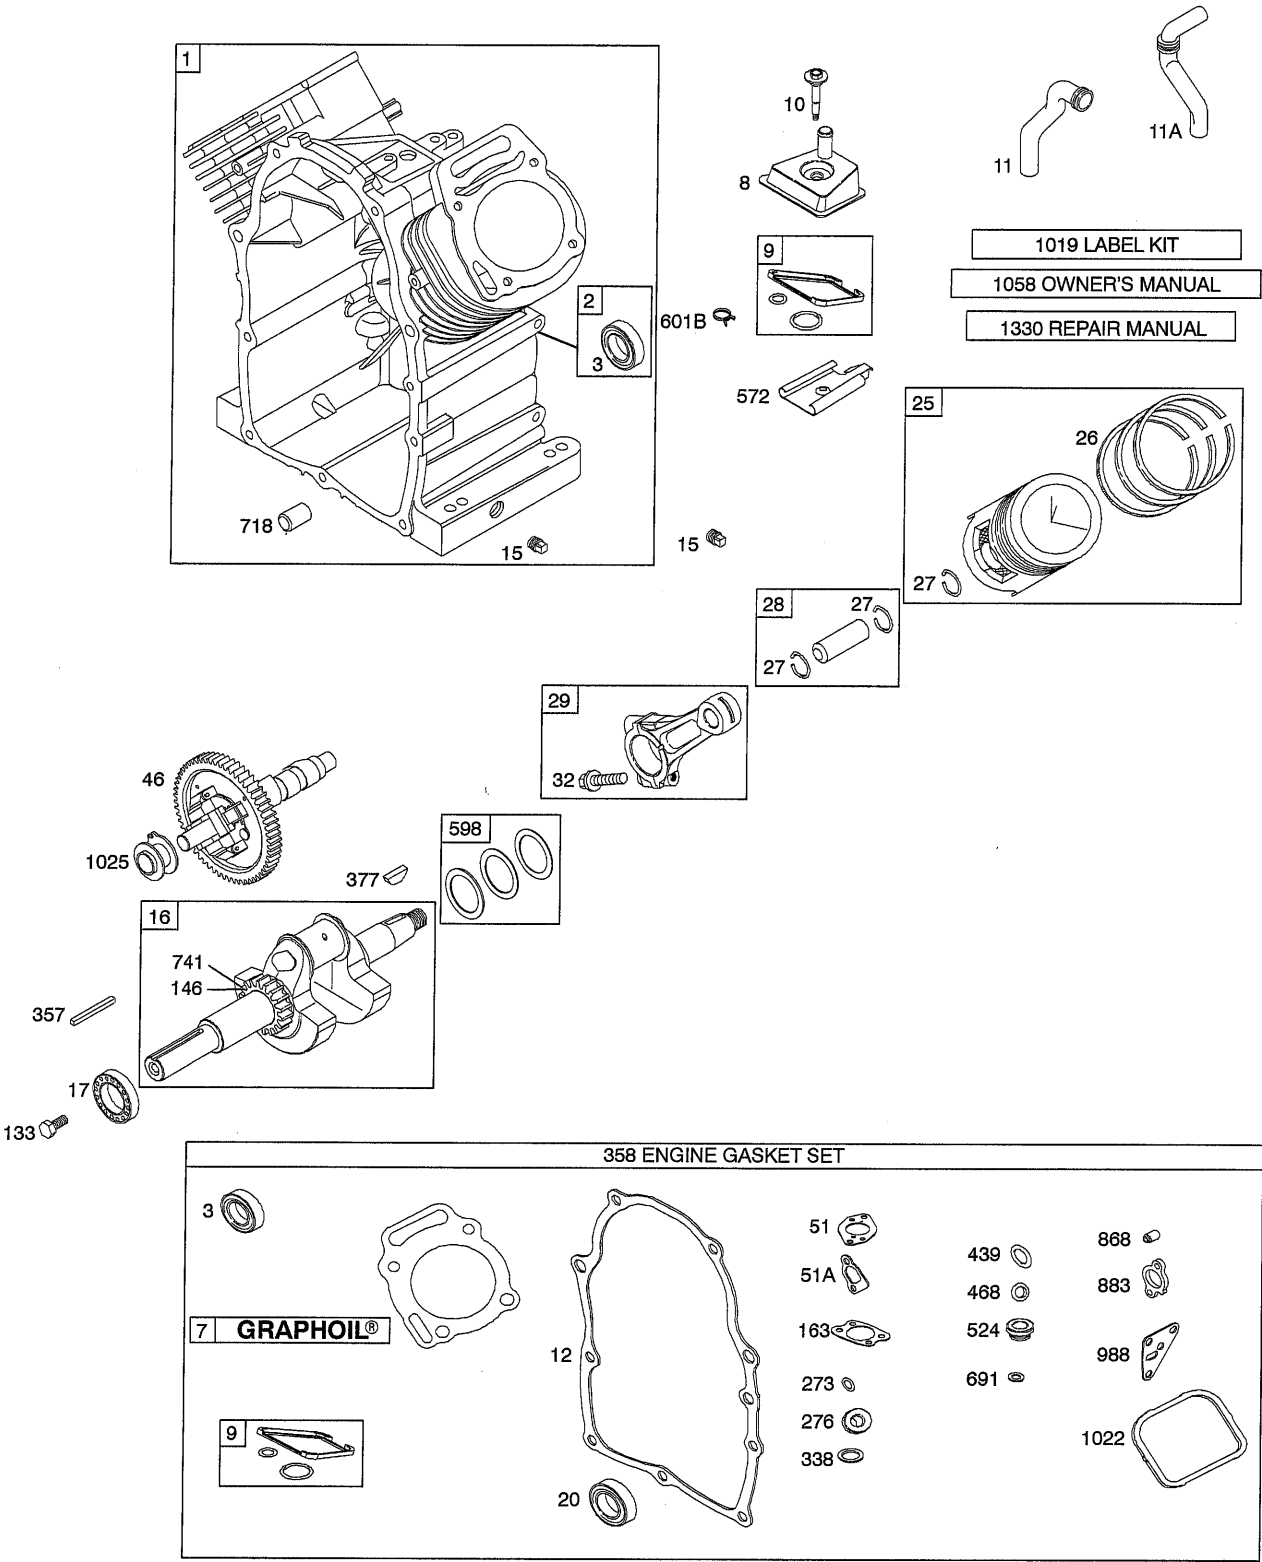


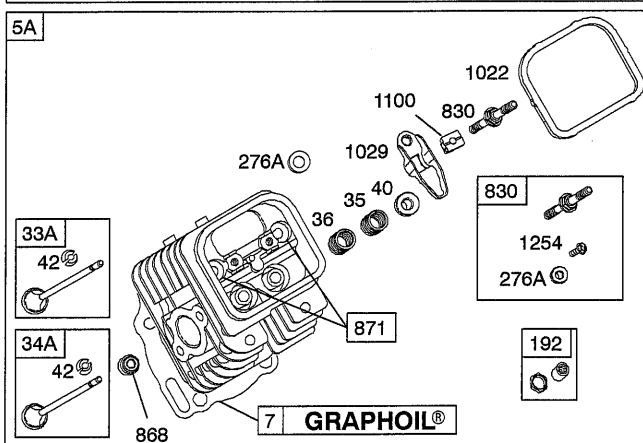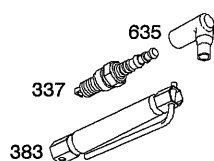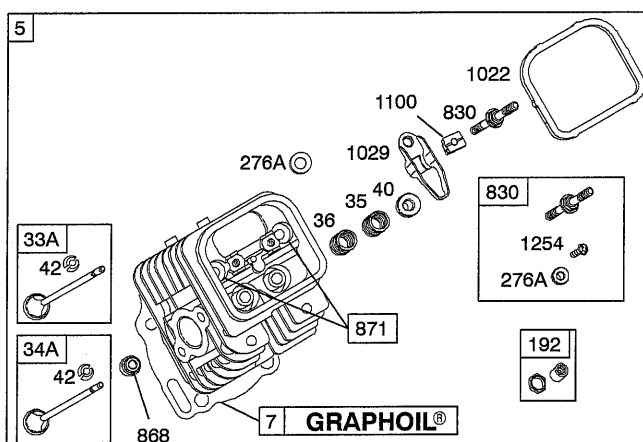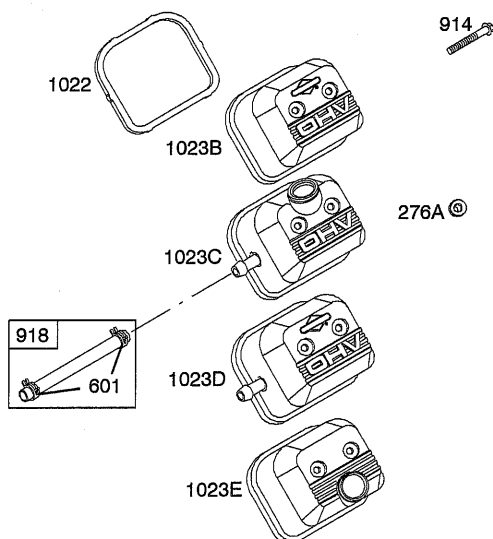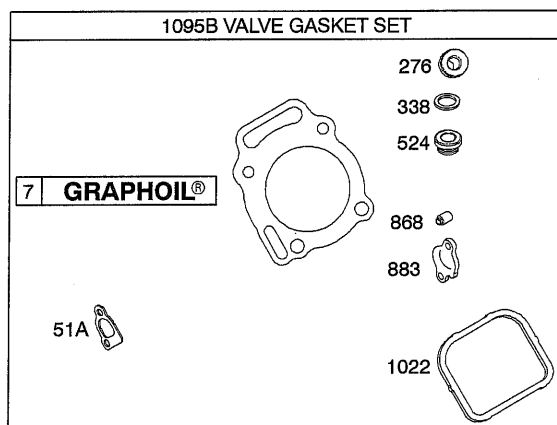

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.
5761-3 Assemblies include all parts shown in frames.

08/22/2006

356400

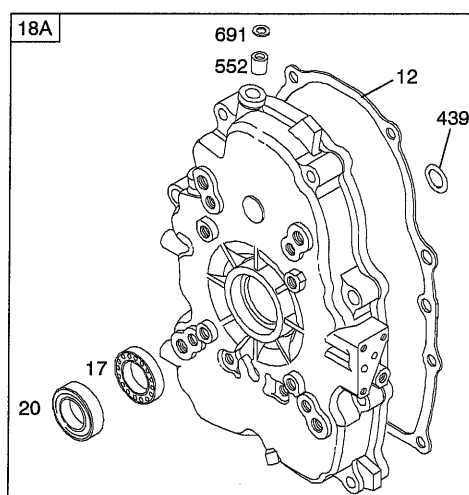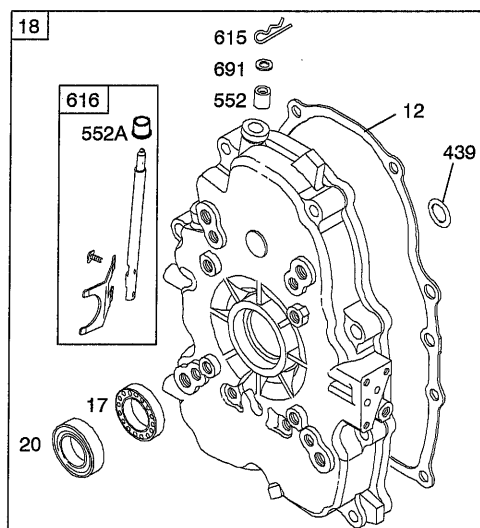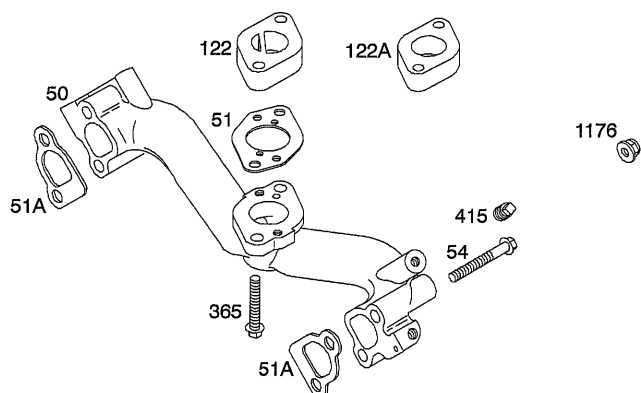


Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

5761-4

Assemblies include all parts shown in frames.

08/22/2006

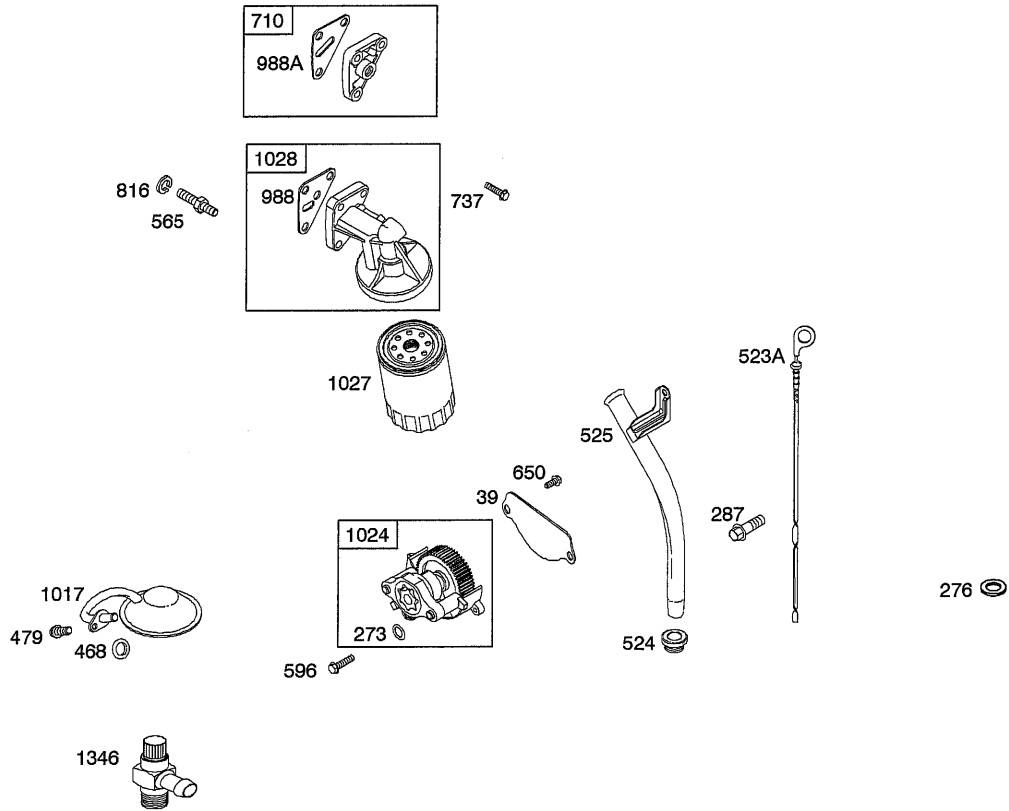


Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

5761-5


Assemblies include all parts shown in frames.

08/22/2006

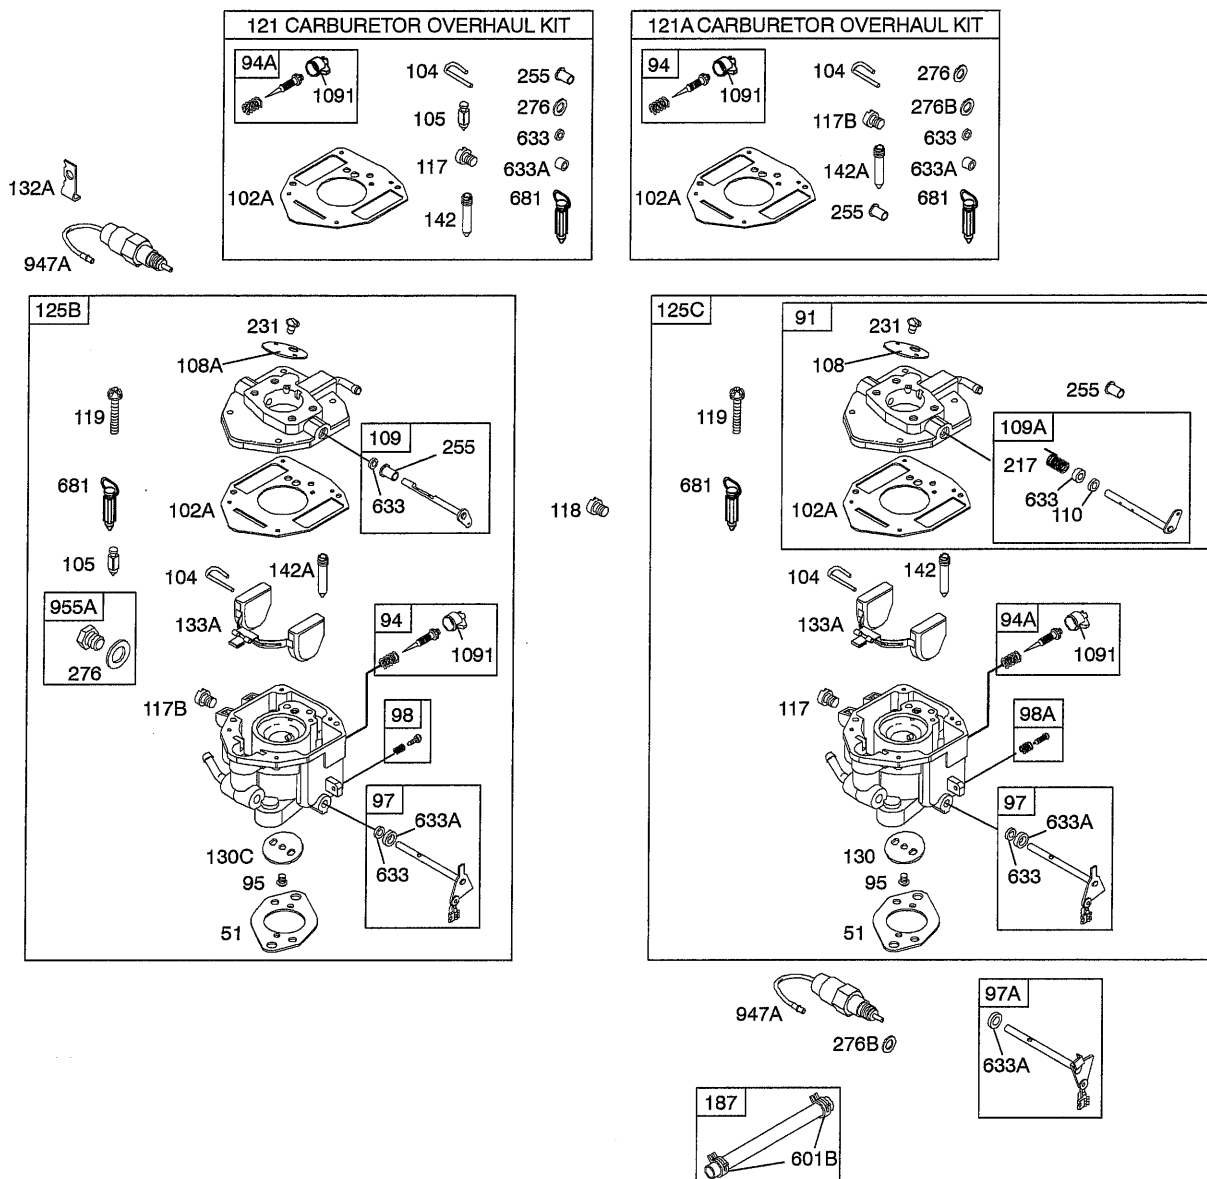

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.
 5761-6 Assemblies include all parts shown in frames.


08/22/2006

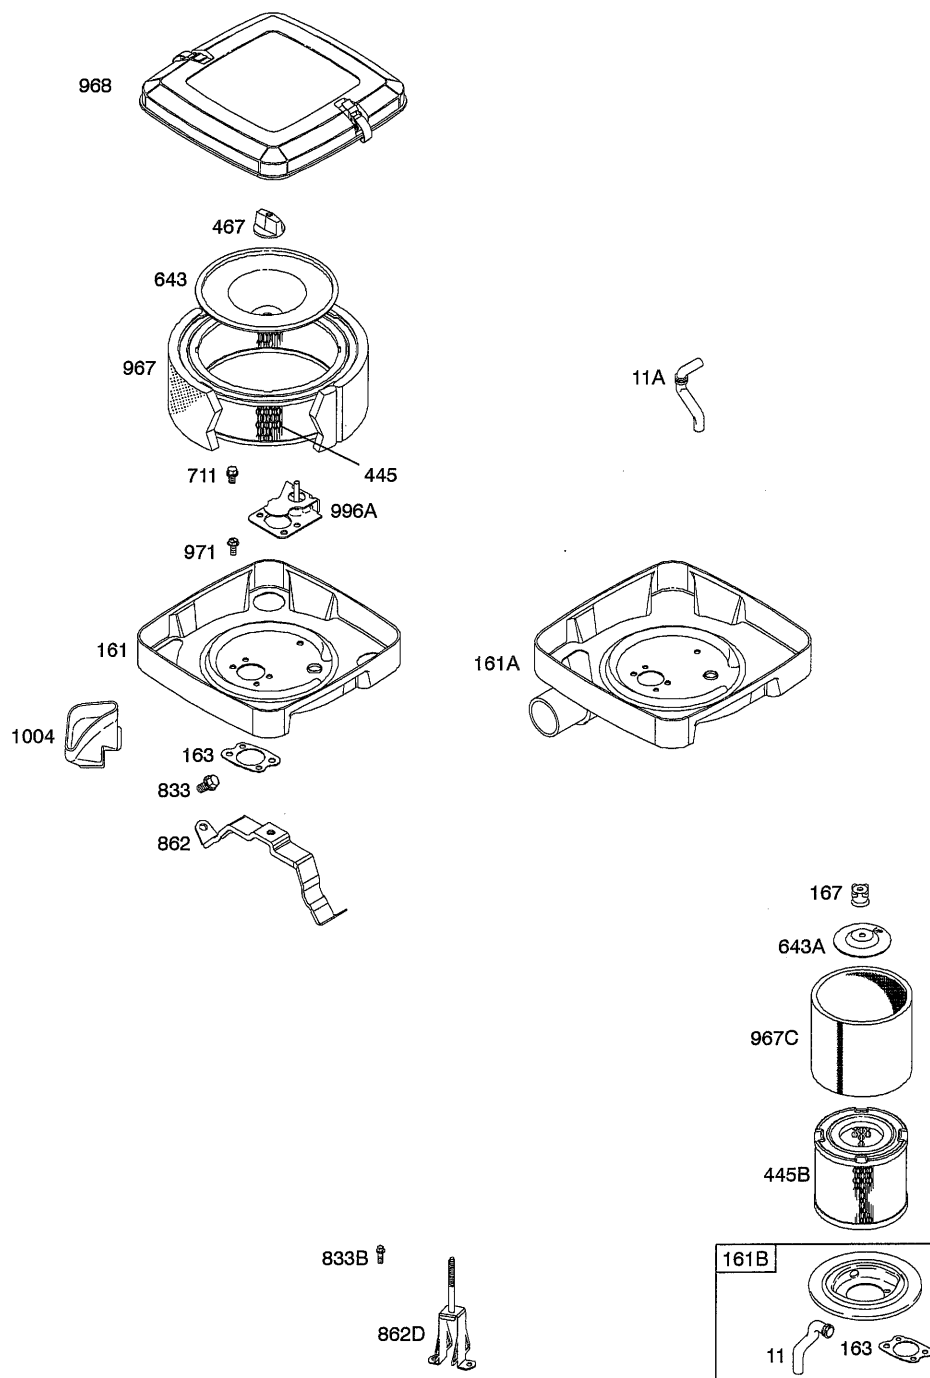


Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.
 5761-7 Assemblies include all parts shown in frames.

08/22/2006

356400

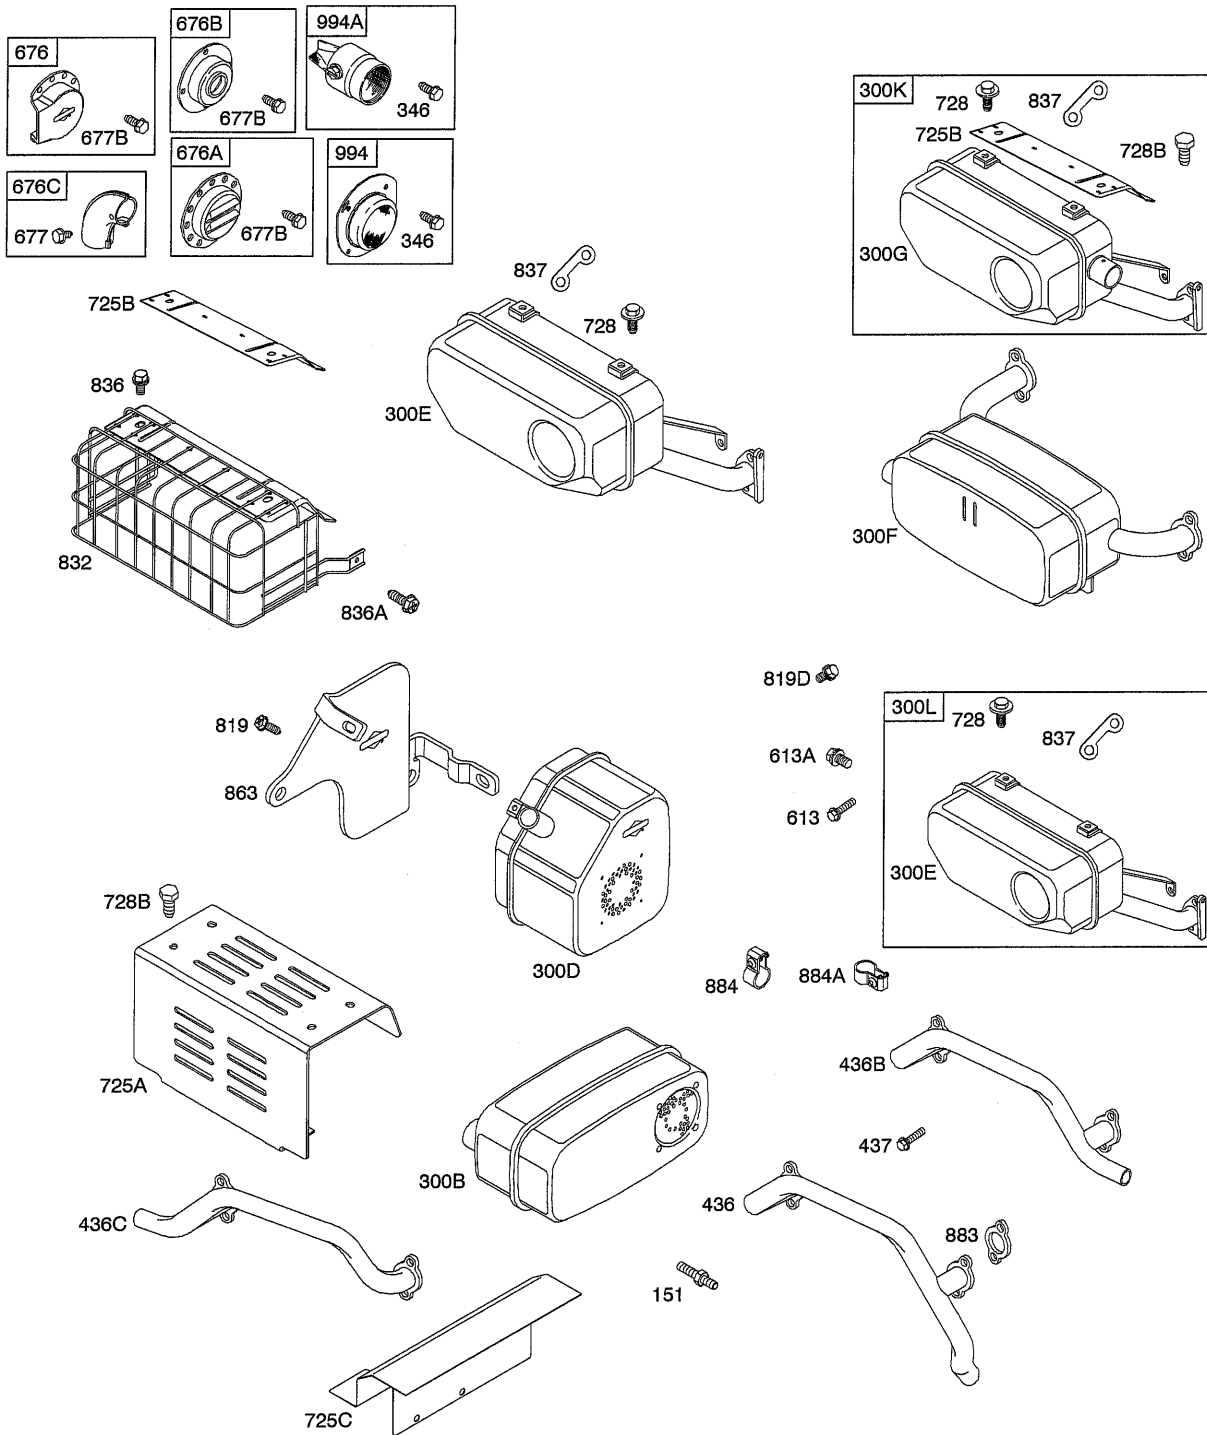


Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.
5761-8 Assemblies include all parts shown in frames. **08/22/2006**

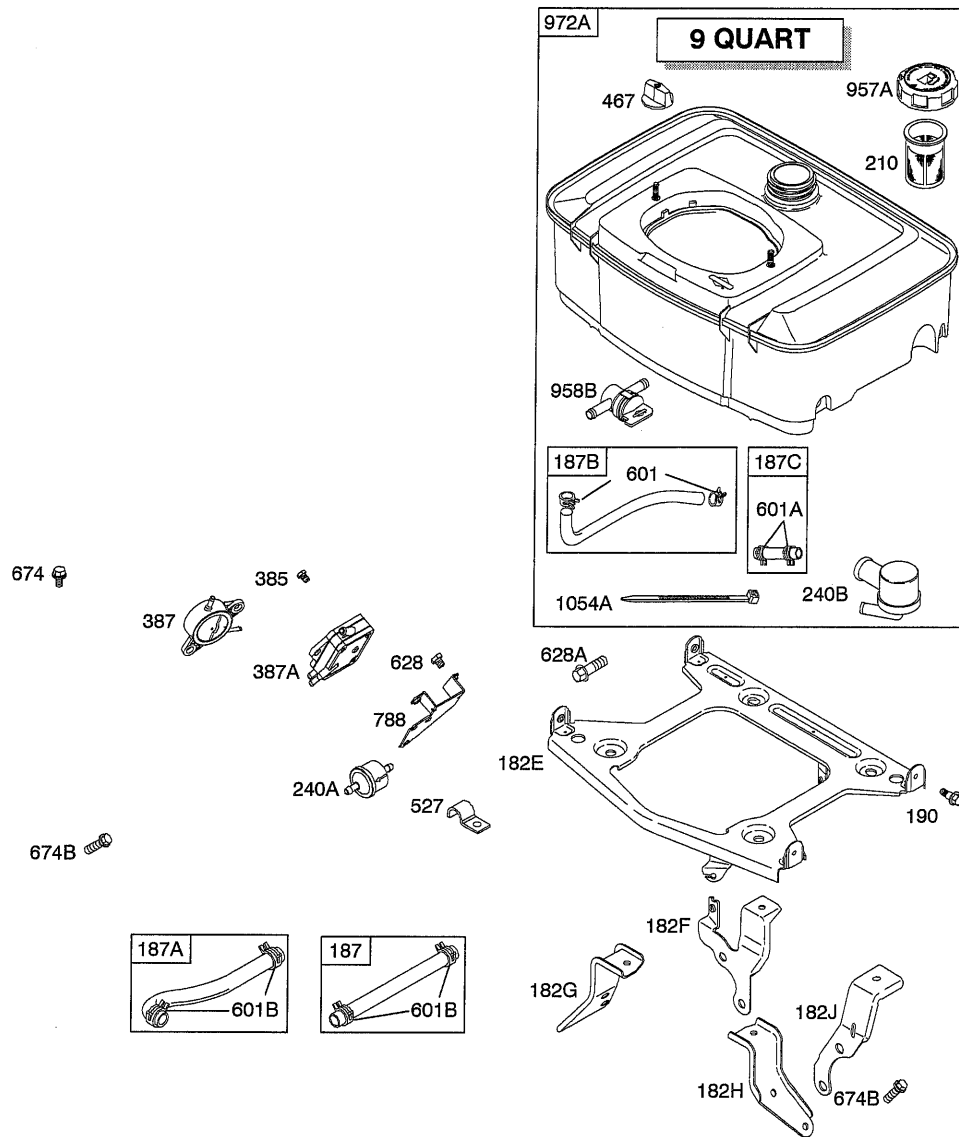



Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.
5761-9

Assemblies include all parts shown in frames.

08/22/2006

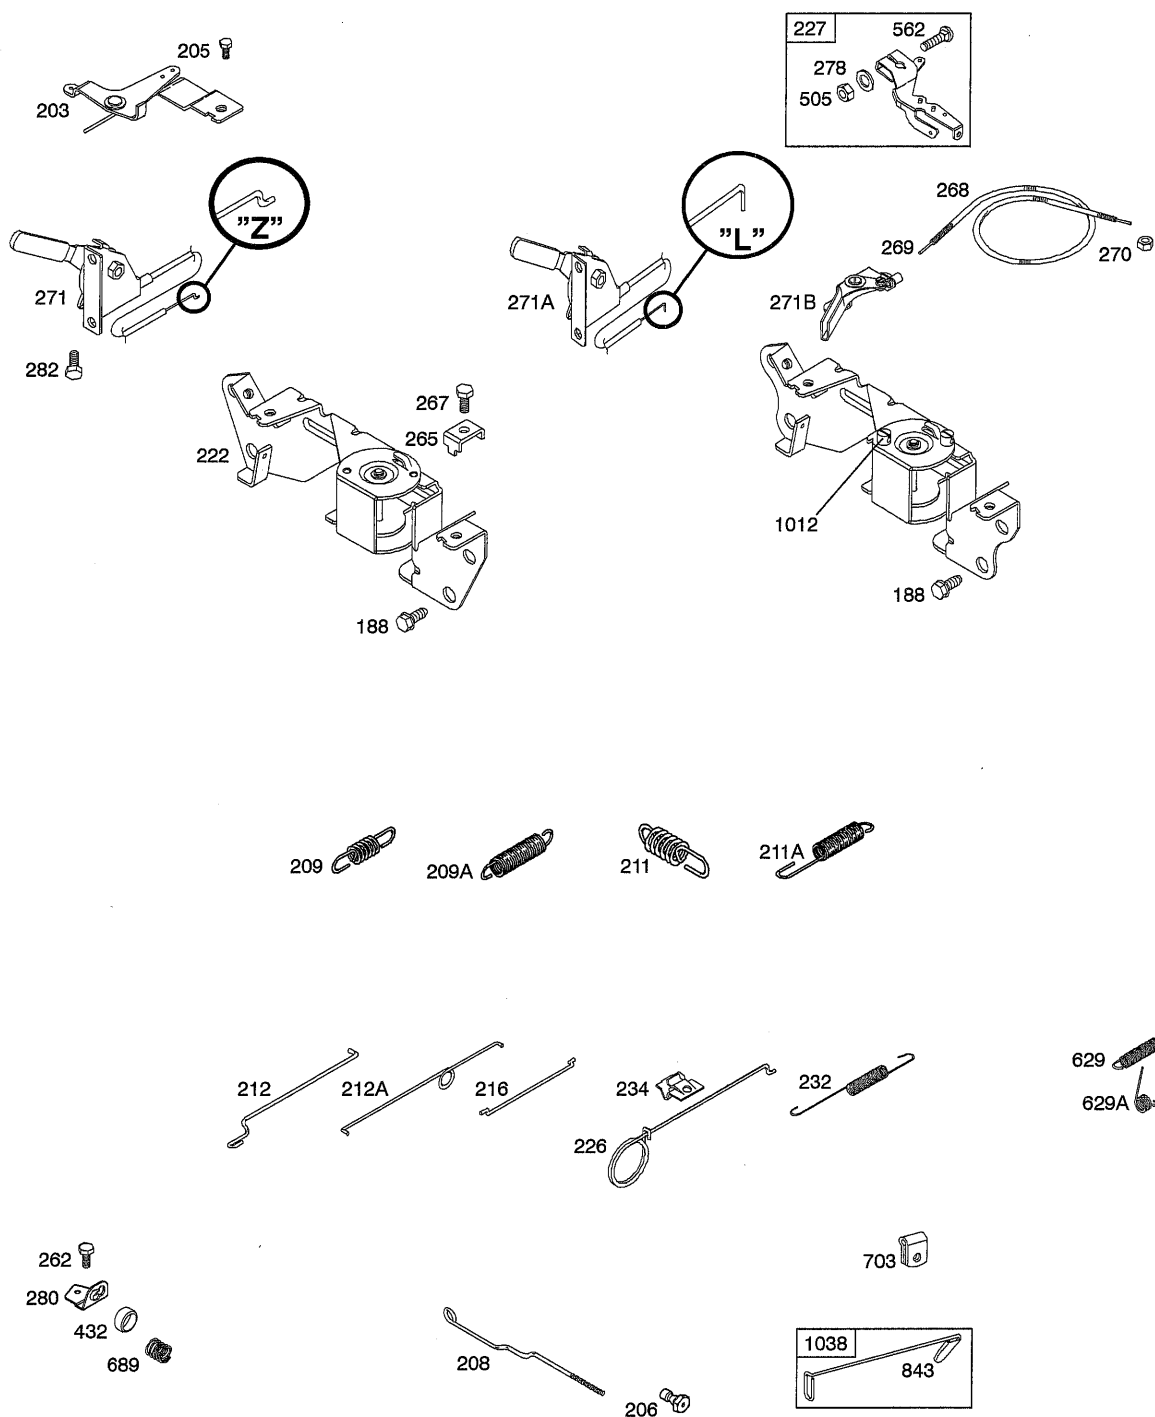

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.
 5761-10 Assemblies include all parts shown in frames. 08/22/2006


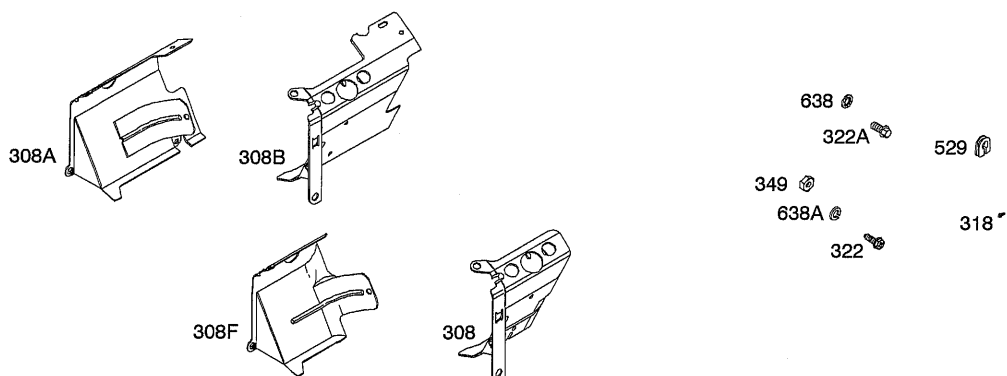
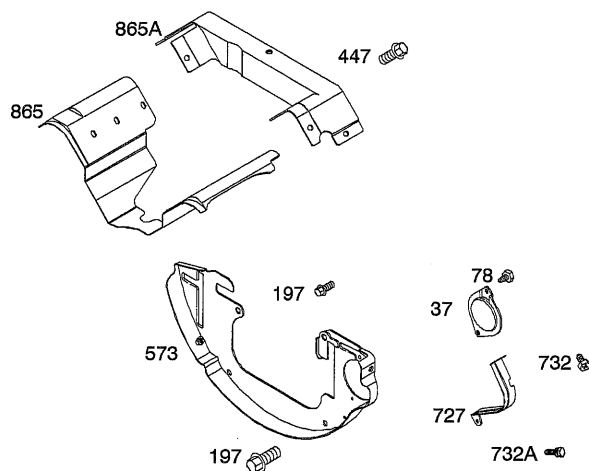


Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.



5761-11

Assemblies include all parts shown in frames.

08/22/2006

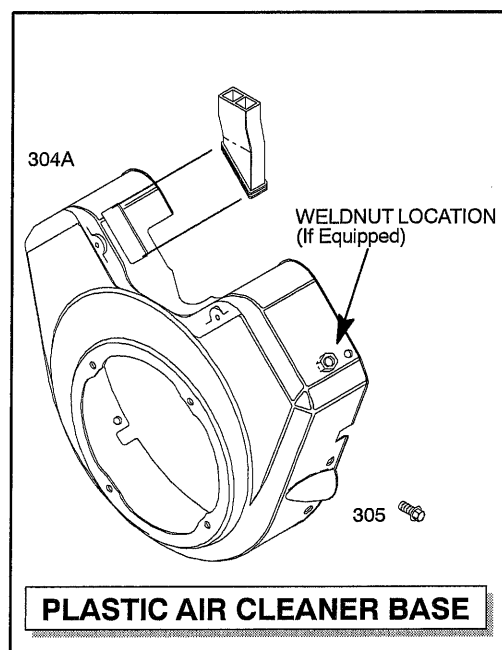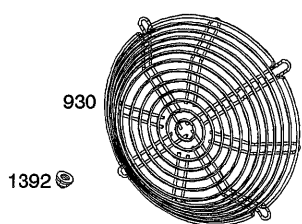

1036 EMISSIONS LABEL



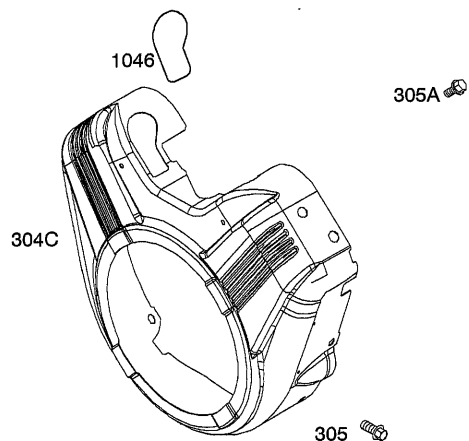
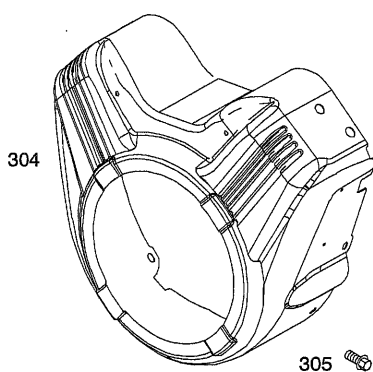



Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.








5761-12


Assemblies include all parts shown in frames.

08/22/2006

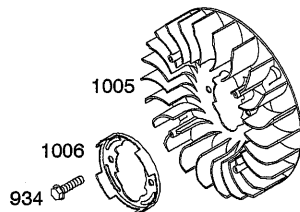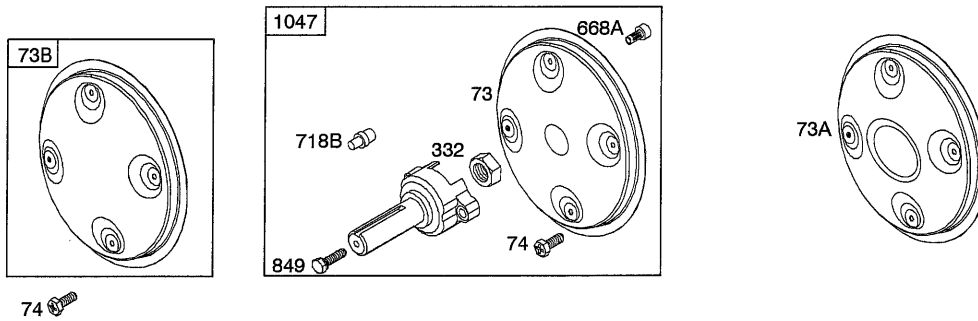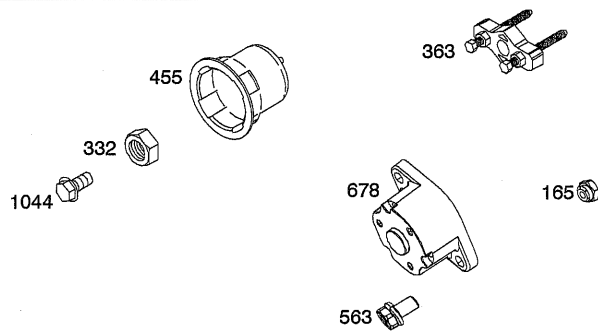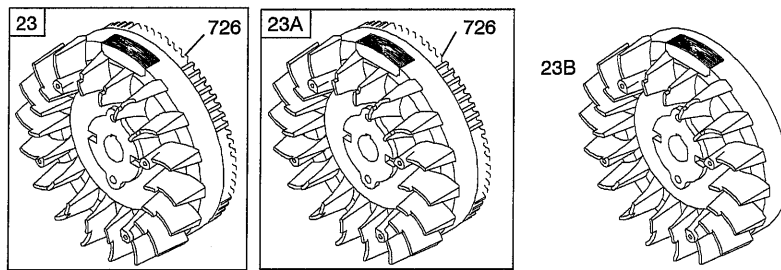

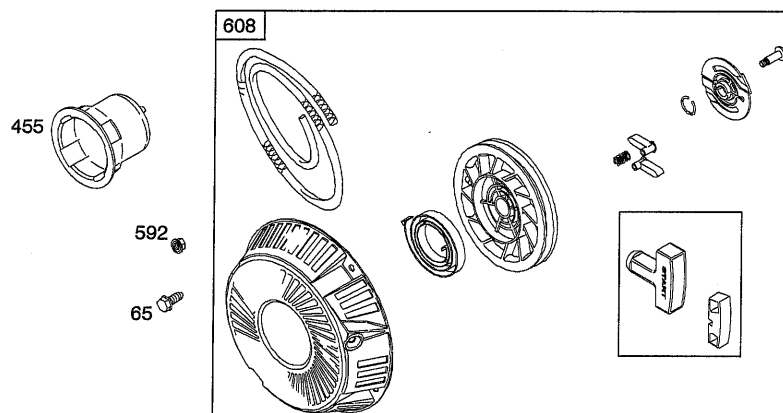

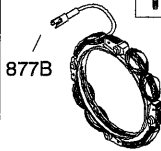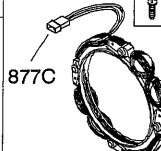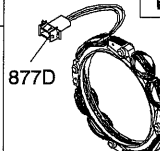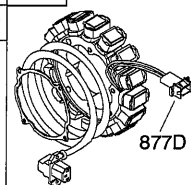5 - 9 AMP		10 - 16 AMP		20 AMP		20 AMP POWER LINK
474C	1059	474D	1059	474E	1059	474F
						
						
NOTE: All stators use a No. 1119 mounting screw. 				526  501		526B  501B


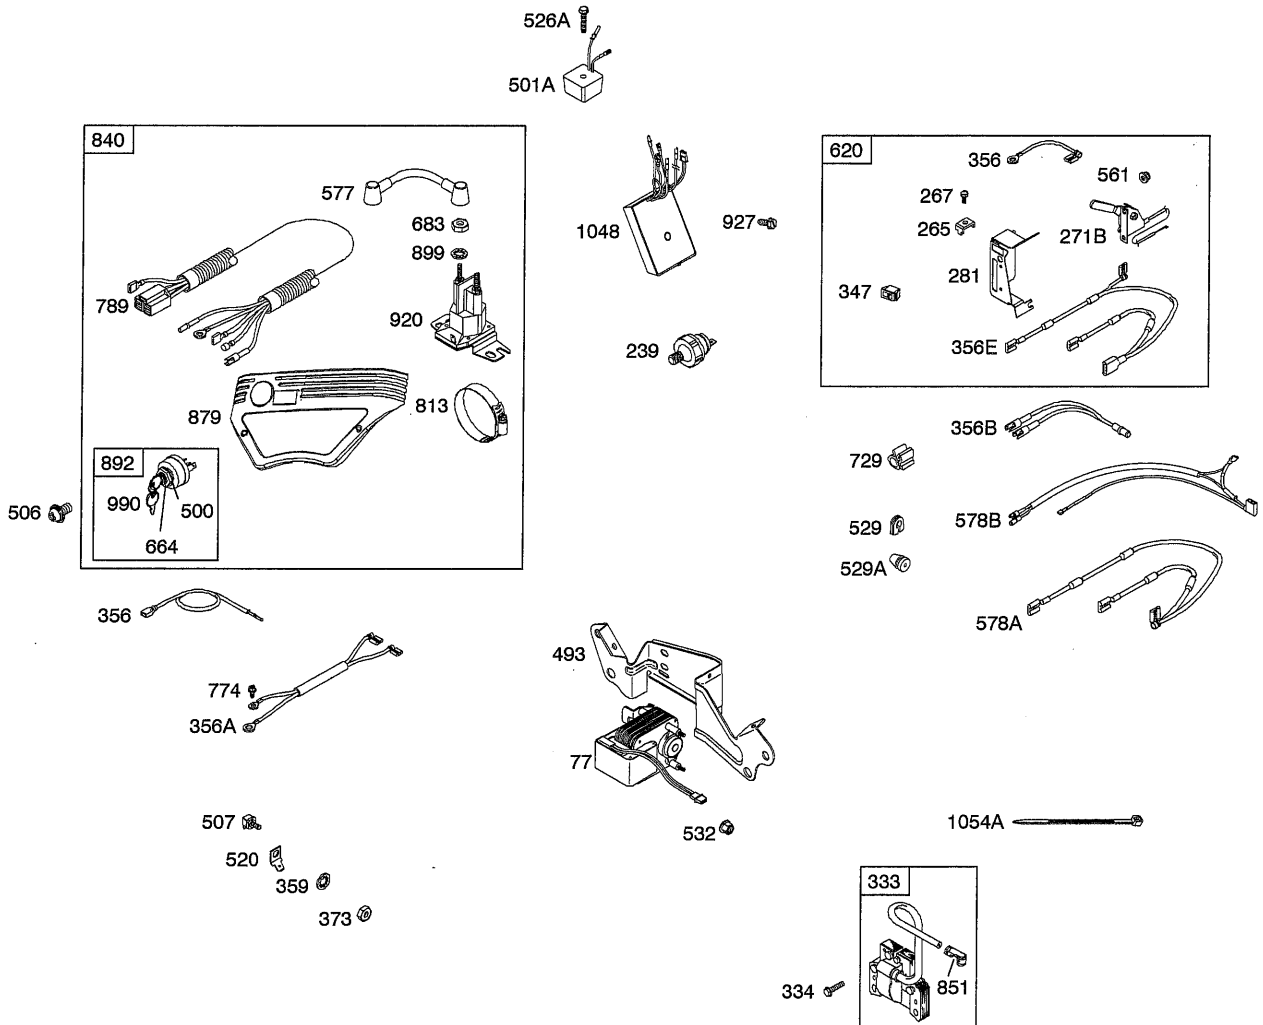


Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.



5761-15

Assemblies include all parts shown in frames.

08/22/2006

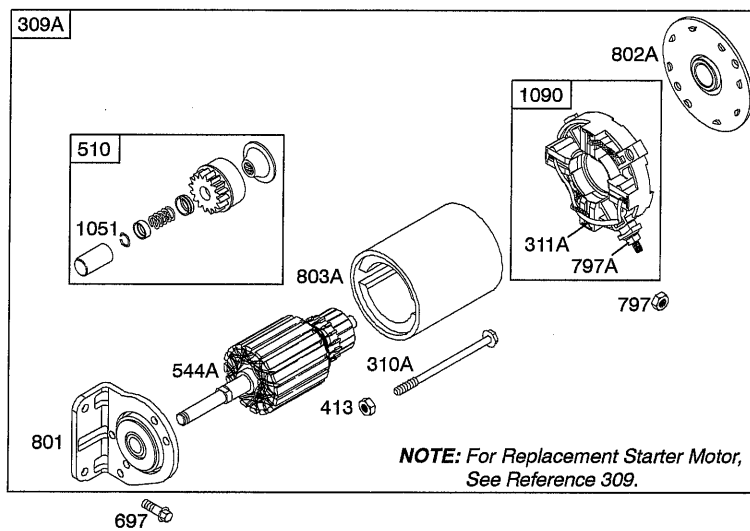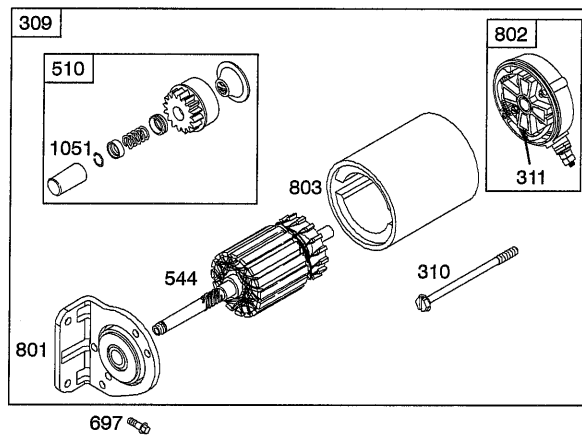

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

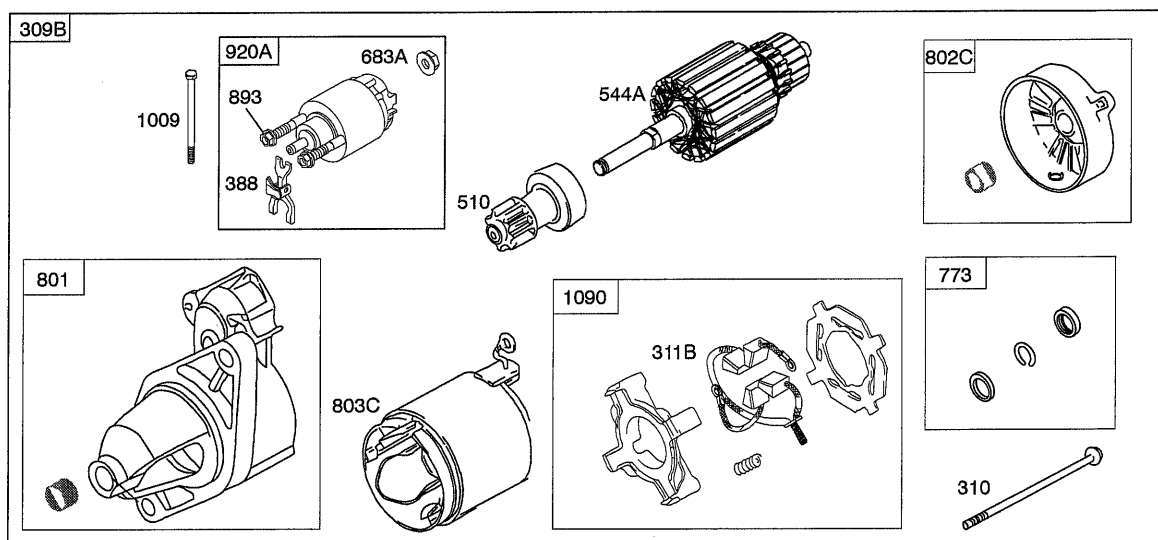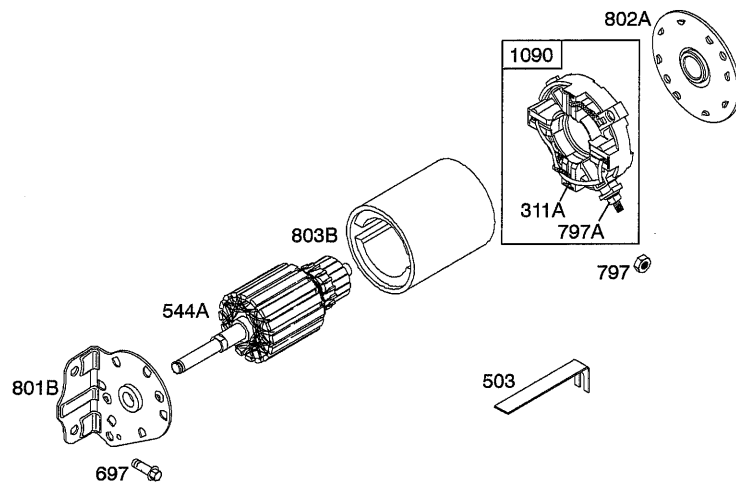

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

5761-17

Assemblies include all parts shown in frames.

08/22/2006

356400

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	692544	Cylinder Assembly ----- Note ----- 841579 Cylinder Assembly Used on Type No(s). 0116, 0166, 0167, 0175. 841562 Cylinder Assembly Used on Type No(s). 0130, 0165, 0207, 1415. 841146 Cylinder Assembly Used on Type No(s). 0155, 0183.	16	809806	Crankshaft ----- Note ----- 809842 Crankshaft Used on Type No(s). 0158, 0159, 0161, 0162, 0164, 0166, 0167, 0169, 0172, 0186, 0197, 0199, 0200, 0201, 0207, 0215, 0216, 0331. 809811 Crankshaft Used on Type No(s). 0078, 0121, 0122, 0126, 0128, 0149, 0150, 0152, 0173, 0194, 0202, 0219. 809804 Crankshaft Used on Type No(s). 0171, 0189, 0191. 809822 Crankshaft Used on Type No(s). 0203. 809832 Crankshaft Used on Type No(s). 0133. 809836 Crankshaft Used on Type No(s). 0179.	23A	809174	Flywheel Used on Type No(s). 0116, 0166, 0167, 0175. ----- Note ----- 841050 Flywheel Used on Type No(s). 0115, 0135, 0142, 0174, 0200, 0217.
2	808534	Kit-Bushing/Seal (Magnet Side)				23B	841957	Flywheel Used on Type No(s). 0065, 0126, 0127, 0128.
3	★805101s	Seal-Oil (Magnet Side)				25	808326	Piston Assembly (Standard) ----- Note ----- 808337 Piston Assembly (.020" Oversize)
5	809185	Head-Cylinder (Cylinder 1)				26	807889	Ring Set (Standard) ----- Note ----- 807995 Ring Set (.020" Oversize)
5A	809186	Head-Cylinder (Cylinder 2)				27	690683	Lock-Piston Pin
7	★Δ690888	Gasket-Cylinder Head (Graphoil)				28	807886	Pin-Piston (Standard)
8	808984	Breather Assembly				29	807900s	Rod-Connecting (Standard) ----- Note ----- 807803 Rod-Connecting (.020" Undersize)
9	★809094	Gasket-Breather	17	690752	Bearing-Ball	32	690698	Screw (Connecting Rod)
10	690751	Screw (Breather Assembly)	18	808847	Cover-Crankcase ----- Note ----- 808850 Cover-Crankcase Used on Type No(s). 0203.	33A	807681	Valve-Exhaust
11	691556	Tube-Breather Used on Type No(s). 0065, 0096, 0122, 0125, 0127, 0128, 0130, 0153, 0160, 0167, 0168, 0180, 0186, 0183, 0191, 0206, 0218.	18A	808508	Cover-Crankcase Used on Type No(s). 0115, 0116, 0149, 0150, 0174, 0175.	34A	807680	Valve-Intake
11A	806083s	Tube-Breather				35	692084	Spring-Valve (Intake)
12	★691684	Gasket-Crankcase	20	★805049s	Seal-Oil (PTO Side)	36	692084	Spring-Valve (Exhaust)
13	692059	Screw (Cylinder Head)	21	809500	Cap-Oil Fill	37	841309	Guard-Flywheel
15	690946	Plug-Oil Drain	22	807362	Screw (Crankcase Cover/Sump)	39	690745	Deflector-Oil
			23	809236	Flywheel (Steel Ring Gear) ----- Note ----- 841728 Flywheel Used on Type No(s). 0119, 0148, 0153. 842442 Flywheel Used on Type No(s). 0130, 0165, 0207, 1415.	40	692058	Retainer-Valve
						42	807683	Keeper-Valve

★ Included in Engine Gasket Set-Ref. No. 358.

Δ Included in Valve Gasket Set-Ref. No. 1095B.

● Included in Carburetor Overhaul Kit-Ref. No. 121 or 121A.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

5761-18

Assemblies include all parts shown in frames.

08/22/2006

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
45	690977	Tappet-Valve	94	●808399	Kit-Idle Mixture	121	809021	Kit-Carburetor
46	691557	Camshaft	94A	●808257	Kit-Idle Mixture			Overhaul
		----- Note -----			Used on Type No(s).			Used on Type No(s).
		692157 Camshaft			0162, 0200.			0162, 0200.
		Used on Type No(s).	95	690718	Screw	121A	809024	Kit-Carburetor
		0115, 0116, 0149,			(Throttle Valve)			Overhaul
		0150, 0174, 0175.	97	809062	Shaft-Throttle	122	690691	Spacer-Carburetor
50	690754	Manifold-Intake			----- Note -----			Used on Type No(s).
51	★691694	Gasket-Intake			807495 Shaft-Throttle			0162, 0172, 0179,
		(Manifold To			Used on Type No(s).			0200.
		Carburetor)			0162, 0200.	122A	690747	Spacer-Carburetor
51A	★△692035	Gasket-Intake	97A	842734	Shaft-Throttle	125B	809017	Carburetor
		(Manifold to Head)			Used on Type No(s).			----- Note -----
54	690676	Screw			0179.			809019 Carburetor
		(Intake Manifold)	98	808177	Kit-Idle Speed			(Gravity Feed)
65	690341	Screw	98A	808981	Kit-Idle Speed			Used on Type No(s).
		(Rewind Starter)			Used on Type No(s).			0065, 0066, 0096,
73	841582	Screen-Rotating			0162, 0179, 0200.			0122, 0125, 0127,
		Used on Type No(s).	102A	●692077	Gasket-Carburetor			0130, 0153, 0167,
		0114, 0115, 0116,			Body			0168, 0173, 0183.
		0148, 0154, 0156,	104	●690723	Pin-Float Hinge			842733 Carburetor
		0172, 0174, 0175,	105	●805620	Valve-Float Needle			(Includes Solenoid)
		0179, 0220.			Used on Type No(s).			Used on Type No(s).
73A	841662	Screen-Rotating			0065, 0066, 0122,			0179.
73B	841440	Screen-Rotating			0125, 0127, 0153,	125C	809217	Carburetor
		Used on Type No(s).			0167, 0168, 0173,			Used on Type No(s).
		0079, 0117, 0118,			0183.			0162, 0200.
		0124, 0135, 0139,	108	690719	Valve-Choke	130	690726	Valve-Throttle
		0140, 0153, 0157,			Used on Type No(s).			Used on Type No(s).
		0158, 0159, 0162,			0162, 0200.			0162, 0200.
		0171, 0177, 0191,	108A	806134	Valve-Choke	130C	806132	Valve-Throttle
		0197, 0200, 0201,	109	808398	Shaft-Choke	132A	690863	Stop-Throttle
		0203, 0216.	109A	809096	Shaft-Choke			----- Note -----
74	841441	Screw			Used on Type No(s).			692155 Stop-Throttle
		(Rotating Screen)			0162, 0200.			Used on Type No(s).
		(Used After Code Date	110	806861	Washer			0161.
		04021500).			(Choke Shaft)	133A	806961	Float-Carburetor
		----- Note -----	117	●690862	Jet-Main	142	●690725	Nozzle-Carburetor
		807112 Screw			(Standard)			(Standard)
		(Rotating Screen)			Used on Type No(s).			Used on Type No(s).
		(Used Before Code			0162, 0200.			0162, 0200.
		Date 04021600).	117B	●806126	Jet-Main	142A	●806128	Nozzle-Carburetor
77	690819	Motor-Servo			(Standard)			(Standard)
78	690688	Screw	118	809685	Jet-Main	146	691639	Key-Timing
		(Flywheel Guard)			(High Altitude)	151	841185	Stud
91	809208	Body-Upper	119	690720	Screw			(Exhaust Manifold)
		Carburetor			(Upper To Lower			
		Used on Type No(s).			Carburetor Body)			
		0162, 0200.						

★ Included in Engine Gasket Set-Ref. No. 358.

● Included in Carburetor Overhaul Kit-Ref. No. 121 or 121A.

△ Included in Valve Gasket Set-Ref. No. 1095B.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

5761-19

Assemblies include all parts shown in frames.

08/22/2006

356400

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
161	691561	Base-Air Cleaner (Metal)	203	690923	Crank-Bell	209A	690709	Spring-Governor
161A	842830	Base-Air Cleaner (Metal)	205	692083	Screw (Bell Crank)			Used on Type No(s). 0121, 0122, 0126, 0128, 0202, 0203.
		Used on Type No(s). 0114, 0117, 0139, 0156, 0158, 0161, 0172, 0220.	206	691244	Nut-Governor Adjusting			----- Note -----
161B	808414	Base-Air Cleaner (Metal)	208	691549	Rod-Governor Control			690710 Spring-Governor
		Used on Type No(s). 0065, 0096, 0122, 0125, 0127, 0128, 0130, 0153, 0160, 0167, 0168, 0180, 0183, 0186, 0191, 0206, 0218.	209	692070	Spring-Governor (Main)			Used on Type No(s). 0121, 0122, 0126, 0128, 0202, 0203, 0216.
					----- Note -----	210	691370	Strainer-Fuel
163	★692081	Gasket-Air Cleaner			692071 Spring-Governor (White)	211	692069	Spring-Governed Idle (Red)
165	693148	Nut (Ring Gear)			Used on Type No(s). 0117, 0118, 0135, 0140, 0161, 0179.			----- Note -----
167	692297	Seal-Air Cleaner Nut			691506 Spring-Governor (Yellow)			692068 Spring-Governed Idle (Red)
182E	841601	Bracket-Fuel Tank			Used on Type No(s). 0078, 0141, 0152, 0194, 0219.			Used on Type No(s). 0078, 0141, 0152, 0159, 0162, 0173, 0179, 0189, 0194, 0219.
182F	691520	Bracket-Fuel Tank			691508 Spring-Governor (Blue)			691505 Spring-Governed Idle (White)
182G	841600	Bracket-Fuel Tank			Used on Type No(s). 0156, 0158, 0172, 0179, 0201.			Used on Type No(s). 0133, 0135, 0142, 0164, 0217, 1415.
182H	691524	Bracket-Fuel Tank			690716 Spring-Governor (Green)			691553 Spring-Governed Idle (Green)
182J	691525	Bracket-Fuel Tank			Used on Type No(s). 0133, 0142, 0189, 1415.			Used on Type No(s). 0165.
187	791766	Line-Fuel (Cut To Required Length)			691507 Spring-Governor (Brown)			806868 Spring-Governed Idle (Blue)
187A	791801	Line-Fuel (Cut To Required Length)			Used on Type No(s). 0154, 0165, 0199.			Used on Type No(s). 0162, 0200.
		Used on Type No(s). 0122, 0125, 0127, 0128, 0130.			805630 Spring-Governor	211A	690707	Spring-Governed Idle (White)
187B	692107	Line-Fuel (Used on Type No(s). 0122, 0125, 0127, 0128, 0130.			Used on Type No(s). 0173.			Used on Type No(s). 0121, 0122, 0126, 0128, 202, 0203.
187C	692106	Line-Fuel (Used on Type No(s). 0122, 0125, 0127, 0128, 0130.			806507 Spring-Governor (Black)	212	690712	Link-Throttle
188	692056	Screw (Control Bracket) (14mm Bracket)			Used on Type No(s). 0165, 0217.	212A	691519	Link-Throttle
190	692199	Screw (Fuel Tank)			806872 Spring-Governor (Orange)	216	690705	Link-Choke
192	807623	Adjuster-Rocker Arm			Used on Type No(s). 0162, 0200.	217	806862	Spring-Choke Return
197	807163	Screw (Back Plate)				222	808454	Bracket-Control (Used With Control Lever And/Or Wire With "Z" Formed End)

★ Included in Engine Gasket Set-Ref. No. 358.

△ Included in Valve Gasket Set-Ref. No. 1095B.

● Included in Carburetor Overhaul Kit-Ref. No. 121 or 121A.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

5761-20

Assemblies include all parts shown in frames.

08/22/2006

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
226	692075	Rod-Hand Choke	300B	498984s	Muffler Used on Type No(s). 0158, 0201.	305	692056	Screw (Blower Housing) (14mm)
227	690236	Lever-Governor Control	300D	692099	Muffler Used on Type No(s). 0066, 0149, 0150, 0152, 0186, 0191, 0202, 0219.	305A	841233	Screw (Blower Housing) (M6 X 10)
231	690718	Screw (Choke Valve)	300E	690906	Muffler	308	841183	Cover-Cylinder Head (Cylinder 1)
232	692073	Spring-Governor Link	300F	690931	Muffler (Hi Mount) (Starter Side Exit) Used on Type No(s). 0154, 0199.	308A	841316	Cover-Cylinder Head (Cylinder 2) Used on Type No(s). 0124, 0154, 0179, 0199.
234	691723	Clip-Control Rod	300G	691562	Muffler Used on Type No(s). 0133, 0172, 0206.	308B	841317	Cover-Cylinder Head (Cylinder 1) Used on Type No(s). 0124, 0154, 0179, 0199.
239	690233	Switch-Oil Pressure ----- Note ----- 491657s Switch-Oil Pressure Used on Type No(s). 0066, 0135, 0142, 0145, 0191, 0217, 0194.			----- Note ----- 692464 Muffler Used on Type No(s). 0161.	308F	841182	Cover-Cylinder Head (Cylinder 2)
240A	691035	Filter-Fuel	300K	808379	Muffler Used on Type No(s). 0133.	309	691564	Motor-Starter (Steel Ring Gear Only)
240B	808116s	Filter-Fuel Used on Type No(s). 0122, 0125, 0127, 0128, 0130, 0218.	300L	808380	Muffler	309A		Motor-Starter (For Replacement Starter Motor, Order Reference 309)
255	690721	Bushing-Choke Shaft	304	841397	Housing-Blower Used on Type No(s). 0114, 0117, 0118, 0124, 0156, 0159, 0162, 0172, 0177, 0179, 0199, 0200, 0203, 0216, 0220.	309B	808817	Motor-Starter Used on Type No(s). 0116, 0155, 0166, 0167, 0183, 0175.
262	692083	Screw (Rod Bracket)			----- Note ----- 842710 Housing- Blower Used on Type No(s). 0149, 0150.	310	496880	Screw (Starter Motor)
265	691024	Clamp-Casing	304A	841398	Housing-Blower Used on Type No(s). 0079, 0115, 0116, 0139, 0140, 0154, 0157, 0171, 0174, 0191, 0197, 0201.	310A	690323	Screw (Starter Motor)
267	692083	Screw (Casing Clamp)	304C	841732	Housing-Blower ----- Note ----- 842742 Housing- Blower Used on Type No(s). 0152, 0158, 0161, 0164, 0166, 0167, 0169, 0202, 0215, 0331.	311	496887	Brush Set
268	691025	Casing-Control Wire				311A	497608	Brush Set
269	691026	Wire-Control				311B	825411	Brush Set
270	691027	Nut (Control Wire Casing)				318	690932	Screw (Mounting Bracket)
271	692541	Lever-Control				322	841233	Screw (Cylinder Head Cover)
271A	692105	Lever-Control				322A	692067	Screw (Cylinder Head Cover) Used on Type No(s). 0124, 0154, 0179.
271B	691028	Lever-Control				332	690887	Nut (Flywheel)
273	690681	Seal-O Ring (Oil Pump)				333	492341	Armature-Magneto
276★	690724	Washer-Sealing				334	692066	Screw (Magneto Armature)
276A	807085	Washer-Sealing (Head)(Rocker Cover)						
276B	806137	Washer-Sealing (Solenoid)						
278	842122	Washer (Governor Control Lever)						
280	691526	Bracket-Rod						
281	690742	Panel-Control						
282	692083	Screw (Control Lever)						
287	692062	Screw (Dipstick Tube)						

★ Included in Engine Gasket Set-Ref. No. 358.

● Included in Carburetor Overhaul Kit-Ref. No. 121 or 121A.

△ Included in Valve Gasket Set-Ref. No. 1095B.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

356400

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
337	491055s	Plug-Spark ----- Note ----- 792015 Plug-Spark Used on Type No(s). 0065, 0066, 0075, 0078, 0079, 0096, 0119, 0121, 0122, 0123, 0124, 0125, 0126, 0127, 0128, 0129, 0130, 0135, 0139, 0141, 0142, 0145, 0152, 0154, 0155, 0156, 0157, 0158, 0162, 0163, 0168, 0171, 0183, 0194, 0201, 0202, 0206, 0215, 1415. 496018S Plug-Spark Used on Type No(s). 0162, 0179, 0200. 691043 Plug-Spark Used on Type No(s). 0186.	385	807084	Screw (Fuel Pump)	467	691985	Knob-Air Cleaner
			387	808656	Pump-Fuel	468	★690690	Seal-O Ring (Oil Pump Screen)
			387A	808969	Pump-Fuel Used on Type No(s). 0162, 0179, 0200.	474C	696457	Alternator (9 Amp Regulated) Used on Type No(s). 0153.
			388	820799	Lever-Pinion Drive	474D	696458	Alternator (10-16 Amp Regulated)
			413	693587	Nut (Starter Motor)	474E	696579	Alternator
			415	690283	Plug	474F	841588	Alternator (20 Amp) ----- Note -----
			432	691509	Cap-Spring			841178 Alternator Used on Type No(s). 0130, 0165, 0207, 1415.
			436	692061	Manifold-Exhaust (Lo Mount) (Oil Filter Side) Used on Type No(s). 0135, 0141, 0142, 0145, 0149, 0150, 0152, 0173, 0191, 0202, 0217, 0219, 1415.			841833 Alternator (20 Amp) Used on Type No(s). 0066.
			436A	691499	Manifold-Exhaust (Lo Mount) (Starter Motor Side) Used on Type No(s). 0186.	479	807084	Screw (Oil Pump Screen) ----- Note -----
			436B	691501	Manifold-Exhaust			692537 Screw (Oil Pump Screen) Used on Type No(s). 0115, 0149, 0150, 0174.
			436C	691502	Manifold-Exhaust (Cylinder 1) (Side Outlet) Used on Type No(s). 0158, 0201.	493	691518	Bracket-Mounting
			437	691902	Screw (Exhaust Manifold)	500	691086	Washer (Key Switch)
			439	★692154	Seal-O Ring (Crankcase Cover/Sump)	501	691185	Regulator (10-16 Amp Regulated) ----- Note -----
			445	394018s	Filter-Air Cleaner Cartridge ----- Note -----			493219 Regulator Used on Type No(s). 0123, 0125, 0177, 0216.
					692519 Filter-Air Cleaner Cartridge Used on Type No(s). 0220.	501A	691188	Regulator (5 To 9 Amp Regulated) Used on Type No(s). 0153.
			445B	393957s	Filter-Air Cleaner Cartridge Used on Type No(s). 0065, 0096, 0122, 0125, 0127, 0130, 0153, 0160, 0167, 0168, 0180, 0183, 0191, 0206.	501B	691573	Regulator (20 Amp) ----- Note -----
			447	841233	Screw (Air Guide Cover)			808877 Regulator Used on Type No(s). 0145.
			455	841794	Cup-Flywheel			841170 Regulator (20 Amp) Used on Type No(s). 0130, 0165, 0207, 1415.
338	★Δ691312	Gasket-Dipstick (Dipstick Gasket)						
346	690661	Screw (Spark Arrestor)						
347	691995	Switch-Rocker						
349	690238	Nut (Cylinder Head Cover)						
356	690796	Wire-Stop (Control Panel)						
356A	690809	Wire-Stop						
356B	692961	Wire-Stop						
356E	691999	Wire-Stop						
357	691483	Key-Drive Pulley						
358	841188	Gasket Set-Engine						
359	691077	Washer (Ground Terminal)						
363	19203	Puller-Flywheel						
365	690711	Screw (Carburetor)						
373	691612	Nut (Ground Terminal)						
377	808095	Key-Woodruff						
383	19374s	Wrench-Spark Plug ----- Note ----- 19576s Wrench-Spark Plug Used on Type No(s). 0139, 0156, 0157, 0201.						

★ Included in Engine Gasket Set-Ref. No. 358.

Δ Included in Valve Gasket Set-Ref. No. 1095B.

● Included in Carburetor Overhaul Kit-Ref. No. 121 or 121A.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

5761-22

Assemblies include all parts shown in frames.

08/22/2006

356400

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
503	691532	Strap-Starter	562	690239	Bolt (Governor Control Lever)	613A	692067	Screw (Muffler) Used on Type No(s). 0066, 0149, 0152, 0202, 0219.
505	690238	Nut (Governor Control Lever)	563	841735	Screw (Debris Screen Guard)	615	691550	Retainer-Governor Shaft
506	807120	Screw (Carburetor Cover)	565	690682	Stud (Oil Filter Adapter)	616	806685	Crank-Governor
507	691972	Insulator	572	690686	Baffle-Breather	620	494052	Panel-Speed Control
510	496881	Drive-Starter	573	841310	Plate-Back ----- Note ----- 841311 Plate-Back Used on Type No(s). 0116, 0166, 0167, 0175. 841127 Plate-Back Used on Type No(s). 0155, 0183. 841314 Plate-Back Used on Type No(s). 0165, 1415.	628	806660	Screw (Fuel Pump Bracket)
520	691084	Terminal-Ground				628A	692062	Screw (Fuel Pump Bracket) Used on Type No(s). 0162, 0179, 0200.
523A	693175	Dipstick				629	806717	Spring-Throttle Return
524	★Δ693172	Seal-Dipstick Tube				629A	806716	Spring-Throttle Return
525	693174	Tube-Dipstick (Standard)				633	●690722	Seal-Choke/Throttle Shaft
526	692067	Screw (Regulator)(10-16 Amp Regulated)	577	690795	Cable-Starter	633A	●806131	Seal-Choke/Throttle Shaft
526A	690717	Screw (Regulator)(5 To 9 Amp Regulated) Used on Type No(s). 0153.	578	692306	Wire Assembly	635	692076	Boot-Spark Plug
526B	691547	Screw (Regulator)(20 Amp)	578A	692319	Wire Assembly	638	691551	Washer (Cylinder Cover) (Internal Tooth Lockwasher) (Used Before Code Date 03110100).
527	690423	Clamp-Tube	578B	691377	Wire Assembly Used on Type No(s). 0116, 0149, 0150, 0175.	638A	690706	Washer (Cylinder Head Cover)(Internal Tooth Lockwasher) Used on Type No(s). 0124, 0154, 0179.
529	690744	Grommet	592	690939	Nut (Rewind Starter)	643	692079	Retainer-Air Filter
529A	691527	Grommet Used on Type No(s). 0065, 0066, 0096, 0122, 0125, 0128, 0130, 0153, 0160, 0167, 0168, 0180, 0183, 0186, 0191, 0206, 0218.	596	691492	Screw (Oil Pump)	643A	690447	Retainer-Air Filter Used on Type No(s). 0065, 0096, 0122, 0125, 0127, 0130, 0153, 0160, 0167, 0168, 0180, 0183, 0191, 0206, 0218.
532	691115	Nut (Mounting Bracket)	598	807625	Shim-End Play (Crankshaft or Camshaft Bearing)	650	692539	Screw (Oil Deflector)
544		Armature-Starter (For Replacement Armature, Order Reference 309)	601	691038	Clamp-Hose			
544A		Armature-Starter (Service With 691564 Starter Motor Only)	601A	691522	Clamp-Hose			
552	690701	Bushing-Governor Crank (Output End)	601B	791850	Clamp-Hose			
552A	806686	Bushing-Governor Crank	608	841729	Starter-Rewind			
561	690713	Nut (Control Lever)	613	691902	Screw (Muffler) ----- Note ----- 692328 Screw (Muffler) Used on Type No(s). 0154.			

★ Included in Engine Gasket Set-Ref. No. 358.

Δ Included in Valve Gasket Set-Ref. No. 1095B.

● Included in Carburetor Overhaul Kit-Ref. No. 121 or 121A.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

5761-23

Assemblies include all parts shown in frames.

08/22/2006

356400

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
664	691087	Nut (Key Switch)	727	841313	Cover-Starter Drive	803	690854	Housing-Starter
668A	691500	Spacer	728	691514	Screw (Heat Shield)	803A	693547	Housing-Starter
674	692056	Screw (Fuel Tank Bracket) (M8 X 14)	728B	692067	Screw (Heat Shield)	803B		Housing-Starter (Serviced By 691564 Starter Motor Only)
674B	692062	Screw (Fuel Tank Bracket) (M8 X 18)	729	690586	Clip-Wire	803C	820783	Housing-Starter
676	393761	Deflector-Muffler Used on Type No(s). 0150, 0158, 0201, 0203.	732	690688	Screw (Starter Drive Cover)	813	690635	Clamp
676A	397630	Deflector-Muffler Used on Type No(s). 0162, 0200.	732A	841233	Screw (Starter Drive Cover)	816	690706	Washer (Oil Filter Adapter)
676B	396903	Deflector-Muffler Used on Type No(s). 0207.	737	690679	Screw (Oil Filter Adapter)	819	692056	Screw (Muffler Bracket) (M8 X 14)
676C	495518	Deflector-Muffler	741	691530	Gear-Timing	819D	692062	Screw (Muffler Bracket) (M8 X 18)
677	810079	Screw (Muffler Deflector)	773		Retainer (For Replacement Starter Motor, Order Reference 309B)	830	809157	Stud-Rocker Arm
677B	690661	Screw (Muffler Deflector)	774	692067	Screw (Stop Wire)	832	691571	Guard-Muffler
678	841730	Spacer-Rewind	788	691559	Bracket-Fuel Pump	833	841233	Screw (Air Cleaner Mounting Strap/Stud)
681	808798	Kit-Needle/Seat	789	691996	Harness-Wiring	833B	691593	Screw (Air Cleaner Mounting Strap/Stud)
683	691029	Nut (Starter Solenoid)			----- Note ----- 841318 Harness- Wiring Used on Type No(s). 0155, 0183.			Used on Type No(s). 0065, 0096, 0122, 0125, 0127, 0128, 0130, 0153, 0167, 0168, 0183, 0186, 0191, 0218.
683A	820809	Nut (Starter Solenoid)			842744 Harness- Wiring Used on Type No(s). 0166, 0167.	836	691514	Screw (Muffler Guard)
689	691272	Spring-Friction			691578 Harness- Wiring Used on Type No(s). 0217, 0142.	836A	692067	Screw (Muffler Guard)
691	690680	Seal-Governor Shaft	797	691029	Nut (Brush Retainer)	837	808085	Spacer-Muffler
697	692062	Screw (Drive Cap)	797A	693167	Nut (Brush Retainer)	840	842828	Kit-Panel (Used After Code Date 06011800)
703	807116	Clip	801	808778	Cap-Drive			----- Note ----- 692096 Kit-Panel (Used Before Code Date 06011900)
710	807689	Cover-Oil Filter	801B	691283	Cap-Drive	843	691322	Sleeve-Lever
711	841233	Screw (Carburetor Shield)	802	496813	Cap-End	849	691088	Screw (Stub Shaft)
718	806469	Pin-Locating	802A	691286	Cap-End	851	493880s	Terminal-Spark Plug
718B	841581	Pin-Locating (Used After Code Date 04021500).	802C		Cap-End (For Replacement Starter Motor, Order Reference 309B)			
		----- Note ----- 690740 Pin-Locating (Used Before Code Date 04021600).						
725A	805702	Shield-Heat						
725B	691498	Shield-Heat						
725C	806102	Shield-Heat						
726		Gear-Ring (Steel)(See Reference 23 for Service)						

★ Included in Engine Gasket Set-Ref. No. 358.

△ Included in Valve Gasket Set-Ref. No. 1095B.

● Included in Carburetor Overhaul Kit-Ref. No. 121 or 121A.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

5761-24

Assemblies include all parts shown in frames.

08/22/2006

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
862	692153	Strap/Stud-Air Cleaner Mounting		842129	Cover-Carburetor (Used Before Code Date 04100100). Used on Type No(s). 0065, 0127, 0128.	899	691077	Washer (Starter Solenoid)
862D	691565	Strap/Stud-Air Cleaner Mounting Used on Type No(s). 0065, 0096, 0122, 0125, 0127, 0128, 0130, 0153, 0167, 0168, 0183, 0191, 0218.		842128	Cover-Carburetor (Used Before Code Date 04100100). Used on Type No(s). 0066, 0096, 0122, 0125.	914	807120	Screw (Rocker Cover)
863	691513	Bracket-Muffler ----- Note ----- 690756 Bracket-Muffler Used on Type No(s). 0186.		842129	Cover-Carburetor Used on Type No(s). 0119, 0126.	918	393815	Hose-Vacuum (Cut To Required Length)
865	807119	Cover-Air Guide (Black)		842269	Cover-Carburetor Used on Type No(s). 0114, 0117, 0139, 0156, 0158, 0161, 0172, 0220.	920	691656	Solenoid-Starter
865A	841319	Cover-Air Guide (Aluminum) Used on Type No(s). 0124, 0154, 0179, 0199.		842132	Cover-Carburetor Used on Type No(s). 0130, 0146, 0148, 0153, 0167, 0168, 0183, 0191.	920A	825418	Solenoid-Starter
868	★△691963	Seal-Valve				927	691116	Screw (Electronic Governor Module) Used on Type No(s). 0116, 0117, 0149, 0150.
871	692057	Bushing-Valve Guide				930	841490	Guard-Rewind Used on Type No(s). 0158.
877B	393537	Wire/Connector-Alternator				934	691058	Screw (Fan Retainer)
877C	399916	Wire/Connector-Alternator (2 Wires, 7-53/64" Long)(2 Bare Wire Ends, And Insulated Snap Connect Male Pin Terminal)				947A	692094	Solenoid-Fuel
877D	698092	Wire/Connector-Alternator				955A	807723	Plug-Carburetor
878	691362	Harness-Alternator				957A	493988s	Cap-Fuel Tank (Plastic)
879	841607	Cover-Carburetor ----- Note ----- 842132 Cover-Carburetor (Used After Code Date 04093000). Used on Type No(s). 0065, 0066, 0096, 0122, 0125, 0127, 0128, 0160, 0180, 0186, 0206, 0218.	883	★△691613	Gasket-Exhaust	958B	692008	Valve-Fuel Shut Off (Plastic)
			884	690898	Clamp-Muffler	967	272490s	Filter-Pre Cleaner ----- Note ----- 692520 Filter-Pre Cleaner Used on Type No(s). 0220.
			884A	691956	Clamp-Muffler Used on Type No(s). 0158, 0201.	967C	271794s	Filter-Pre Cleaner Used on Type No(s). 0065, 0096, 0122, 0125, 0127, 0130, 0153, 0160, 0167, 0168, 0180, 0183, 0191, 0206, 0218.
			892	692318	Switch-Key	968	699959	Cover-Air Cleaner (With Clips)
			893	820805	Nut (Starter Solenoid)	971	807084	Screw (Air Cleaner Base to Carburetor)
						972A	690663	Tank-Fuel (Plastic)
						988	★692063	Gasket-Oil Adapter
						988A	690687	Gasket-Oil Adapter
						990	691959	Key Set
						994	392390	Arrestor-Spark
						994A	808361	Arrestor-Spark
						996A	691577	Shield-Carburetor

★ Included in Engine Gasket Set-Ref. No. 358.

● Included in Carburetor Overhaul Kit-Ref. No. 121 or 121A.

△ Included in Valve Gasket Set-Ref. No. 1095B.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

5761-25

Assemblies include all parts shown in frames.

08/22/2006

356400

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1004	842258	Duct-Air ----- Note ----- 690743 Duct-Air Used on Type No(s). 0200.	1027	492932s	Filter-Oil (2 1/4" Long)	1091	●691516	Cap-Limiter
1005	841439	Fan-Flywheel	1028	808235	Adapter-Oil Filter ----- Note ----- 808033 Adapter-Oil Filter Used on Type No(s). 0066, 0116, 0135, 0141, 0142, 0145, 0149, 0150, 0152, 0173, 0191, 0194, 0202, 0217, 0219.	1095B	841191	Gasket Set-Valve
1006	690452	Retainer-Fan				1100	791959	Pivot-Rocker Arm
1009	806474	Screw (Starter Motor)				1119	691552	Screw (Alternator) ----- Note ----- 841835 Screw (Alternator) Used on Type No(s). 0066.
1012	690592	Retainer-Link						807117 Screw (Alternator) Used on Type No(s). 0116, 0166, 0167.
1017	690900	Screen-Oil Pump	1029	807323	Arm-Rocker Label-Emissions (Available from an Authorized Briggs & Stratton Service Dealer)	1133	690342	Screw (Crankshaft)
1019	808036	Kit-Label	1036			1176	842067	Nut (Exhaust Manifold)
1022★△806039s		Gasket-Rocker Cover				1254	807084	Screw (Rocker Cover Stud)
1023B	691494	Cover-Rocker	1038	691567	Rod-Fuel Shut Off	1330	272144	Repair Manual
1023C	690910	Cover-Rocker (Cylinder 1) (With Fuel Pump)	1044	692056	Screw (Flywheel)	1346	492031	Valve-Oil Drain Shut Off
1023D	691558	Cover-Rocker	1046	692082	Plug-Blower Housing	1392	690939	Nut (Rewind Guard) Used on Type No(s). 0158.
1023E	691531	Cover-Rocker	1047	841580	Shaft-Stub			
1024	693185	Pump-Oil	1048	690669	Module-Electronic Governor			
1025	690689	Spool-Governor	1051	691124	Ring-Retaining			
1026	691836	Rod-Push (Steel) ----- Note ----- 691758 Rod-Push (Exhaust)(Aluminum)	1054A	280275	Tie-Cable			
			1058	276343	Operator's Manual			
			1059	698516	Kit-Screw/Washer			
			1090	691293	Retainer-Brush			

★ Included in Engine Gasket Set-Ref. No. 358.

● Included in Carburetor Overhaul Kit-Ref. No. 121 or 121A.

△ Included in Valve Gasket Set-Ref. No. 1095B.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

5761-26

Assemblies include all parts shown in frames.

08/22/2006